



**Wirefree communicating  
GSM alarm system  
EAS**

Installation

Programming

Operating




# Table of Contents

<b>Application Overview.....</b>	<b>I</b>
I. Identifying the parts.....	1
II. Insert GSM SIM Card.....	2
III. The power supply.....	2
IV. Connecting the Wired Devices.....	2
V. How to install the Control Panel.....	2
VI. 2-level passwords.....	3
VII. Getting Started.....	3
<b>Configuring Your System.....</b>	<b>4</b>
I. Entering programming mode.....	4
II. Telephone Settings.....	5
III. General Settings.....	8
IV. Special Settings.....	14
V. ADD/Delete Device.....	17
VI. SMS Editor.....	26
VII. SMS Keyword.....	26
VIII. Country Code.....	26
IX. GSM Signal.....	27
X. Walk Test.....	27
XI. Reset GSM.....	28
<b>Operation.....</b>	<b>28</b>
I. Entering User Menu.....	28
II. Away (Alarm On) Mode.....	29
III. Forced Arming.....	30
IV. Disarm (Alarm off) Mode.....	30
V. Home Arm Mode.....	31
VI. Partial (By-pass) Arm mode.....	31
VII. Alarm Activation.....	32
VIII. Stop the Alarm and Alarm Display.....	34
IX. Event Log.....	35
X. SMS Message Reading.....	35
XI. False Alarm Management.....	36
XII. Faulty Situations.....	37
XIII. Dialling & Call Acknowledgment.....	39
XIV. Remote Commanding.....	41
<b>Appendix.....</b>	<b>43</b>
I. Reset Procedure.....	43



# Application Overview

## I. Identifying the parts

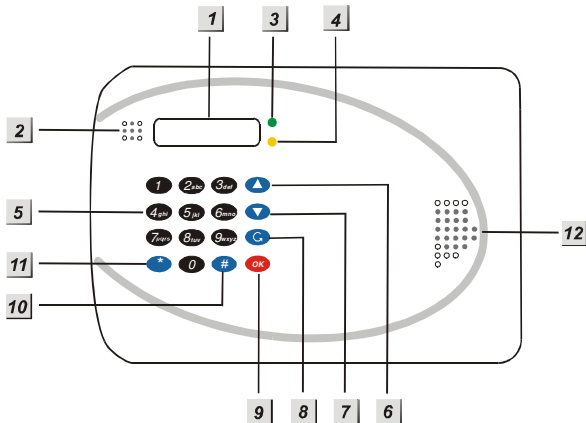

1 Backlit LCD Display

2 Microphone

3 Green LED

— AC Power Indicator; the Green LED will light up when AC Power is on.

4 Yellow LED

— Fault Indicator; the Yellow LED will light up when any fault situation is detected and turn off when all fault conditions are restored.

5 Numeric keys

6 ▲ Key

— In Programming mode, press this key to move the cursor and scroll the display upwards

7 ▼ Key

— In Programming mode, press this key to move the cursor and scroll the display downwards.

8 G Key

— In Programming mode, use this key for deleting a digit, canceling the selection, aborting the current screen and returning to the previous screen etc.

9 OK Key

— To confirm the keyed-in data or confirm the selection.


10 # Key

— To enter the Programming menu.

11 \* Key

— For Telephone Number Setting; The system will dial as it is entered.

12 Speaker

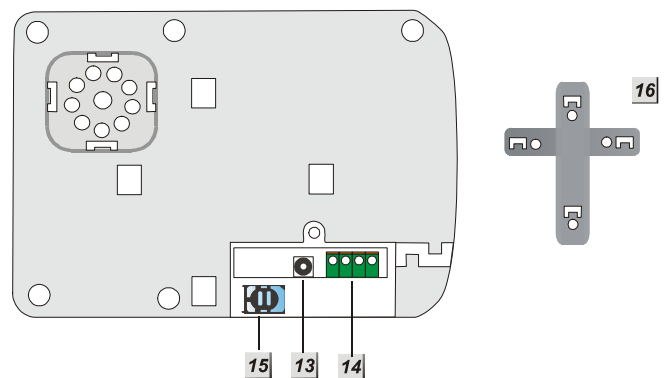

13 DC jack

— For connecting the DC 9V power adapter.

14 Input/Out Terminal x 2

— For connection to wired devices.

15 GSM SIM Card Base

— This slot is for inserting SIM card.


16 Wall Mounting Cross Bracket

## II. Insert GSM SIM Card

EAS/Z918/GSM Control Panel features built-in GSM communication facility to make message reporting to the phone numbers pre-programmed within the system.

### ● To Insert your SIM card:

The GSM component is situated inside the Power Supply compartment as pointed out by the arrow below:

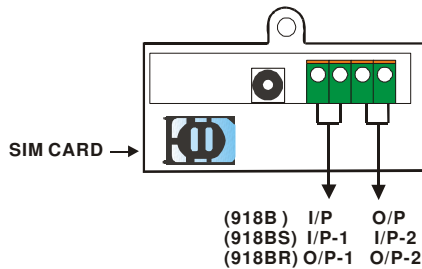

- Unlock the SIM card base by sliding the cover toward **“OPEN-backward”** direction.
- Spring open the SIM card slot and insert your new SIM card.
- Replace the SIM slot onto the base lightly.
- Remember to lock the SIM card base by sliding the cover toward **“LOCK-forward”** direction.

### <IMPORTANT NOTE>

Be aware to only insert or remove SIM card when the Control Panel is completely depleted of any power residual.

## III. The Power Supply

An AC power adapter is required to connect to a wall outlet. Be sure only to use an adapter with the appropriate AC voltage rating to prevent component damage. A DC 9V output and 500mA adapter is generally used to power the Control Panel.

### ● Rechargeable Battery

- In addition to the adapter, there is a rechargeable battery inside the Control Panel that serves as a back up in case of a power failure.
- The battery used is a 6 x 1800 mAh Ni-mH rechargeable battery pack.

- During normal operation, the AC power adapter is used to supply power to the Control Panel and at the same time recharge the battery.
- When the battery is fully charged, it can provide back-up power for a period of at least 8 hours. It takes approximately 48 hours to fully charge the battery.

### <NOTE>

- ☞ The EAS/Z918/GSM is equipped with Backlit LCD display and Backlit 16-button keypad to add the convenience of easy operation when in dark. However, when AC power is missing and for the reason of conservation of rechargeable battery, both Backlit features will be disabled until the AC power is again supplied.

## IV. Connecting the Wired Devices

2 Terminals can be found next to the DC jack for the connection of other wired devices. Depending on individual request, these terminals can be both INPUTS or both OUTPUTS or as INPUT/OUTPUT combination.

## V. How to install the Control Panel

**The easiest way to get to know the system and get it up and running quickly is to get all the devices and accessories programmed on a tabletop before locating and mounting them.**

The Control Panel can be mounted on the wall or wherever desired. Ensure the Control Panel is fitted at approximately chest height where the display can be easily seen and the keypad convenient to operate.

- Using the 4 holes of the Wall Mounting Cross Bracket as a template, mark off the holes' positions.
- Drill 4 holes and fix the screws & plugs provided.
- Hook the EAS/Z918/GSM unit onto the Wall Mounting Cross Bracket (holding the unit with the front facing you).

## VI. 2 – level passwords

In order to provide highest security in operating the system, EAS/Z918/GSM offers 2 levels of authorization. That is

- ✓ Personal PIN Code
- ✓ Master Code

### ● PIN Code

- There are a total of 4 User PIN Codes per each system. The PIN Code is the 1st level of password. It has the authorization for daily operation, such as
  - ✓ Arm the system
  - ✓ Disarm the system
  - ✓ Enter the Home mode
  - ✓ Partially arm the system (By-pass mode)
  - ✓ Display Fault events
  - ✓ View the Event log
  - ✓ Read the SMS messages
- “1234” is set as default User #1 PIN Code by the factory.
- User PIN code #2~#4 are deactivated by factory default

### ● Master Code

- The Master Code has the authorization to enter Programming mode. In Programming mode, the following options can be programmed.
  - ✓ Add the device in
  - ✓ Edit the devices
  - ✓ Remove a device
  - ✓ Program the External Siren
  - ✓ Input/Output Configuration
  - ✓ Set Pin Code
  - ✓ Set Temporary Code
  - ✓ Set Duress Code
  - ✓ Set Master Code
  - ✓ Set Telephone Numbers
  - ✓ Set Messages

- ✓ Set General Operational Features
- ✓ Set Special Operational Features
- ✓ Set SMS related Features
- ✓ Select Walk Test mode
- ✓ GSM signal
- “1111” is set as default Master Code by the factory.

#### <NOTE>

- ☞ No any two codes can be the same, if so, the message, “**Code in use, Select another**” will be displayed to prompt the user to choose differently .

## VII. Getting Started

**Step 1.** Find a suitable location for the Control Panel to be installed.

**Step 2.** Apply the AC Power. You will hear a long beep. “**Alarm On**” will be displayed on the first line and “**00:01 01 Jan**” displayed on the second line of the screen indicating the system is in Away mode (this is the default mode)

**Step 3.** Press “ 1 “ key on the keypad, the display will show.

		E	n	t	e	r		C	o	d	e			
								*	.	.	.			

**Step 4.** Key in the remaining “234” (default User1PIN code, 1234) within 30 sec.

**Step 5.** Press “OK”. You will hear 2 short beeps and the display will show.

		A	l	a	r	m		O	f	f				
		0	0	:	0	1		0	1		J	a	n	

The system is now in Disarmed mode.

#### <NOTE>

- ☞ In Step 4, press “ G “ (cancel) key will clear the code field, (making all the \* dots again).
- ☞ “OK” key confirming the entered PIN code should be pressed within 30 sec. Otherwise, the display will go back to “**Alarm On**” and the system remains armed.

- ☞ During entering PIN code, if more than 20 keys (including “OK” & “G” key) were pressed without a valid PIN code strings, it will inhibit further key presses for 1 minute.
- ☞ In Step3, if you press a key other than numeric keys, the display will remain the same requesting you to key in “1234” (default PIN code) and then press “OK”.
- ☞ The Control Panel has “Screen Save” function. The “Alarm off” message will be displayed for 160 sec. only. Afterwards only current date & time is displayed on the second row line.

**Step 6.** Please wait for 2 to 3 minutes for the system to read its status. Then, if the yellow LED turns on, it indicates that there is a fault. Press “1234” to enter the user menu within 30 sec.

**Step 7.** Press “OK” and the display will show.

	F	a	u	l	t		D	s	p					
	A	w	a	y			A	r	m					
	H	o	m	e			A	r	m					
	B	y	p	a	s	s								
	L	o	g											

**Step 8.** Choose “Fault Dsp” and press “OK”

The following possible Fault will display:

**Panel SIM Card?**

This indicates that you need to insert the GSM SIM Card. *Please refer to Page 16, IV Special Settings, Section 14.*

**Panel GSM PIN Code**

You will need to set up your own PIN code.

**Panel GSM Signal?**

Please change the position of EAS/Z918/GSM control panel to get better GSM signal.

**Panel GSM Fault**

Please re-start your EAS/Z918/GSM control panel

**Panel GSM PUK?**

SIM Card has been locked, please call your service provider for help.

## Configuring your system

### I. Entering Programming mode

If the system is in Disarmed (Alarm off) mode, to enter the Programming mode, follow the steps below.

**Step 1. Press “#” key.**

The screen will prompt you to enter the User1 PIN code.

		P	-	M	o	d	e		E	n	t	e	r		
		P	-	C	o	d	e		.	.	.	.			

**Step 2.** Key in “1234” (default “User1” PIN code) within 30 sec. Then, press “OK”

The screen will prompt you to enter the Master PIN code.

		P	-	M	o	d	e		E	n	t	e	r		
		M	-	C	o	d	e		.	.	.	.			

<NOTE>

- ☞ During keying in the PIN code, press “G” will clear the code field (making all the \* dots again). If the code field is empty, press “G”, the screen will exit and return to “Alarm Off” screen.

**Step 3.** Key in “1111” (default “Master” Code) within 30 sec.

**Step 4. Press “OK”**

The following message is displayed for 2 sec.

		P	r	o	g	r	a	m		M	e	n	u		
		M	a	k	e		a			S	e	l	e	c	t

**Step 5.** Then the Programming Main menu will be displayed.

		W	a	i	k		T	e	s	t					
		T	e	l	.	S	e	t	t	i	n	g			

<NOTE>

- ☞ The cursor is indicated by a flashing dot on the left upper corner. It can be move up & down by pressing “▲” & “▼” key respectively.

**Step 6.** Press “▲” “▼” keys to move the cursor downward or upward. The screen is also scrolled down or up respectively. The following items can be selected.

- ✓ Walk Test
- ✓ Tel. Setting
- ✓ Gen. Settings.
- ✓ Spc. Settings
- ✓ Devices +/-
- ✓ SMS Editor
- ✓ SMS Keyword
- ✓ Country Code
- ✓ GSM Signal
- ✓ Reset GSM

**Step 7.** After making a selection by moving the cursor to the desired item, press “OK” to confirm the selection. The display will show you the individual programming screen accordingly.

<NOTE>

- ☞ If a down-arrow symbol “V” appears on the last column of the screen, it indicates the selection list can be downwards scrolled. If the lowest position is reached, the down-arrow symbol disappears.
- ☞ If an up-arrow symbol “^” appears on the last column of the screen, it indicates the selection list can be upwards scrolled. If the upper position is reached, the up-arrow symbol disappears.
- ☞ Pressing “G”, the screen will also return to “Alarm Off” screen.
- ☞ After User1, 2, 3 & 4 PIN codes and Master code are programmed with new numbers, remember to enter the newly programmed codes when accessing Programming mode afterwards.
- ☞ In Programming mode, if no key is pressed within 5 minutes, the Control Panel will automatically exit Programming mode to Alarm Off mode.

## II. Telephone Settings

In “Telephone Settings” menu, the following parameters can be programmed at your discretion.

*	T	e	l	.	N	u	m	b	e	r	s								
	M	e	s	s	a	g	g	e	s										
	S	t	o	p															

### 1. Telephone Numbers

- In “Tel.Setting” menu, select “Tel Numbers”, the screen allows you to set/change/delete the emergency telephone numbers.
- A maximum of six numbers can be stored in priority order (in the order of A. B. ... to F).

<NOTE>

- ☞ A, B,... to F represent the priority number of the six tel. numbers respectively.
- ☞ If the tel. number for a particular priority number has not been stored, three dots are displayed indicating the memory spot is empty.
- ☞ Only 11 digits can be displayed on the tel. Numbers list. Non fitting numbers are indicated with after the incomplete number.

#### ● Store Tel. Numbers

**Step 1.** Move the cursor to the “Tel. Number” submenu and press “OK”.

The display will show the following screen when no tel. number has been entered:

*	A)	.	.	.															
	B)	.	.	.															
	C)	.	.	.															
	D)	.	.	.															
	E)	.	.	.															
	F)	.	.	.															

**Step 2.** Choose from “A” to “F” sets to store your phone number. Then press “OK”.

The following screen will be shown for you to enter the phone number.

E	n	t	e	r	n	e	w	N	o	.	+	O	K
.	.	.	.	.	.	.	.	.	.	.	.	.	

**Step 3.** Key in your phone number.

**Step 4.** Press “OK”

The screen will then prompt you to choose:

*	V	o	i	c	e	R	e	p	o	r	t		
	S	M	S	r	e	p	o	r	t				

<NOTE>

**Voice Reporting:** For an alarm event, the reporting is done via playing voice messages. Available ones are: Burglar, Medical Emergency, Fire and Panic to the phone numbers programmed at this step.

**SMS Reporting:** For an alarm event, the reporting is done via sending pre-edited SMS messages to the mobile phone numbers programmed at this step.

**Step 5.** Select a preferred reporting style and press “OK”, The screen will return to the “Tel. Number” screen to show you the stored phone number with a letter V indicating it’s a Voice report style and a letter S for SMS report style.

*	A)	2	2	1	8	0	5	5	1	V		
	B)	2	6	9	4	0	6	3	3	S		

<NOTE>

☞ The maximum length of a number is 20 digits including “\*” & “#”. If this length is reached, the Control Panel will sound 5 beeps and no key can be keyed in except “G” key and “OK” key.

☞ During entering the number, the “G” key is used as backspace. However, if the number field is empty, pressing the “G” key, the screen will return to “Tel. Numbers” screen.

☞ During entering the number, when the 15th position is reached, non-fitting numbers will scroll sideward to the left.

● **Change Tel. Numbers**

**Step 1.** On the “Tel. Number” screen. Press “OK”.

**Step 2.** The following screen will be displayed for you to confirm if you really want to change.

		C	h	a	n	g	e	N	u	m	b	e	r
2	2	1	8	0	5	5	1			?	(	O	k)

**Step 3.** Press “OK” to confirm. The following screen will be displayed for you to enter the new number.

E	n	t	e	r	n	e	w	N	o	.	+	O	k
.	.	.	.	.	.	.	.	.	.	.	.	.	.

<NOTE>

☞ Press “G” to abort and the screen returns to “Tel. Number” screen.

**Step 4.** Key in the new number and choose a preferred reporting method.

**Step 5. Press “OK”**  
The new number will then override the previous one. The screen returns to “Tel. Number” screen.

● **Delete Tel. Numbers**

To delete a telephone number, follow the Step 1 to Step 3 of “Changing Tel. Number” described above, and when “Enter new No.” prompt screen is displayed.

E	n	t	e	r	n	e	w	N	o	.	+	O	k
.	.	.	.	.	.	.	.	.	.	.	.	.	.

**Step 4.** Press “OK”, then the previous stored number will be deleted.

**2. Message Menu**

● This menu is for you to record and play the emergency messages.

		P	l	a	y	M	e	s	s	a	g	e	
		R	e	c	o	r	d	M	s	g			
		S	t	o	p								

● With a total capacity of 20 sec, you are allowed to record the emergency messages in 5 parts.

- Address message – 8 sec.
- Burglar message – 3 sec.
- Fire message - 3 sec.
- Panic message - 3 sec.
- Emergency message - 3 sec.

- In an emergency, the Control Panel will dial the emergency phone numbers according to the priority order, then first play the Address message and then play the specific part message (Burglar, Fire, Panic and Emergency) according to the nature of the alarm raised.

## ● Playing Messages

**Step 1.** Move the cursor to select “**Play Message**” and then press “**OK**”, the following “**Play Selection**” menu is shown. You are prompted to select the appropriate message to be played.

	P	I	B	u	r	g	l	.	M	s	g		
	P	I	F	i	r	e			M	s	g		
	P	I	P	A					M	s	g		
	P	I	E	m	e	r	g	.	M	s	g		
	S	t	o	p									

**Step 2.** Move the cursor message and then press “**OK**”. The Address message will first be played, the screen will show.

	N	o	w	P	l	a	y	i	n	g	:		
	A	d	d	r	e	s	s	M	s	g			

After the Address message is played completely, the selected specific alarm message is played accordingly. For example, if it plays the burglar message, the screen will show.

	N	o	w	P	l	a	y	i	n	g	:		
	B	u	r	g	l	a	r	M	s	g			

After playing the specific alarm message is completed, the Address message is played again and starts a new cycle. Playing the message will be repeated for a total of 5 times, and then the screen returns to “Play Selection” menu.

### <NOTE>

- ☞ During playing the message, press “**G**” key will stop playing and the screen returns to “**Play selection**” menu.

## ● Recording the messages

When the “**Record Msg.**” is selected, the following “**Recording Selection**” menu is displayed for you to select which part of the message is to be recorded.

	R	e	c	.	A	d	d	r	e	s	s		
	R	e	c	.	S	p	e	c	i	f	i	c	
	S	t	o	p									

## ● Recording Address message

**Step 1.** Move the cursor to select “**Rec. Address**” and then press “**OK**”, the screen will ask you to confirm.

	C	h	a	n	g	e								
A	d	d	r	e	s	s	M	s	g			+	O	k

**Step 2.** Press “**G**” to abort. Or press “**OK**” to confirm. A prompt Message will be displayed for 2 sec.

S	t	a	r	t	R	e	c	o	r	d	i	n	g
A	f	t	e	r	t	h	e	B	e	e	p		

**Step 3.** After 2 sec, the Control Panel will sound a long beep, the following prompt message will be displayed, and recording can be started.

*	N	o	w	R	e	c	o	r	d	i	n	g	*
	E	n	d	w	i	t	h	O	k				

**Step 4.** Press “**OK**” to end the message; the screen will go to “**Specific Part Selection**” menu to allow you to select a specific part to be recorded.

### <IMPORTANT NOTE>

Address message must be recorded before the Control Panel will dial out at an Alarm situation

### <NOTE>

- ☞ To end recording at any time, press “**G**” and the message will be saved as it is. The screen returns to “**Recording Selection**” menu.
- ☞ The maximum length of Address message is 8 sec. When the 8 sec duration is over, recording will be stopped automatically. The message being recorded will be saved.

☞ When recording, make sure you are facing the microphone and are within 30 cm in front of it.

● **Recording Specific Alarm messages**

- If “**Rec. Specific**” is chosen, the specific alarm message selection menu is displayed for you to select the desired one.

	B	u	r	g	l	a	r	M	s	g		
	F	i	r	e	M	s	g					

	P	A	M	s	g							
	E	m	e	r	g	e	n	.	M	s	g	
	S	t	o	p								

- Selection a specific message and follow the same procedure as those for recording Address message to record each specific message respectively.

<NOTE>

☞ The message length for each specific message is 3 sec only.

● **Changing a message**

If for any reason, you want to change any part of the recorded message, just follow the same procedure to record a new message for that part. The new message will override the previous one.

**III. General Settings**

In “**General Settings**” menu, the following parameters can be programmed at your discretion.

*	P	i	n	C	o	d	e					
	T	e	m	p	.	C	o	d	e			
	D	u	r	e	s	s	C	o	d	e		
	M	a	s	t	e	r	C	o	d	e		
	A	.	E	n	t	r	y	T	i	m	e	
	A	.	E	x	i	t	T	i	m	e		
	H	.	E	n	t	r	y	T	i	m	e	
	H	.	E	x	i	t	T	i	m	e		
	D	o	o	r	C	h	i	m	e			
	T	i	m	e								
	D	a	t	e								
	P	a	n	e	l	S	i	r	e	n		
	S	M	S	f	i	l	t	e	r			

**1. Pin Code**

- There are 4 User Pin Code in total, and each consists of 4 digits. User PIN code #1 is activated with “1234” as factory default. Before you set your own User PIN Code #1, “1234” has to be keyed in every time “**Entering Code**” is required.
- User PIN code #2~#4 are deactivated by factory default.
- **All 4 User Pin Codes** are used to regularly arm/disarm the system and are allowed to access the Programming mode accompanied with the Master Code.

● **To set your own PIN code**

**Step 1.** Move the cursor to the item “**Pin Code**” then press “**OK**” the following screen is displayed.

*	1	)	*	*	*	*						
	2	)	.	.	.	.						
	3	)	.	.	.	.						
	4	)	.	.	.	.						

**Step 2.** Move the cursor to the desired # of “**User Pin Code**” then press “**OK**” the following screen is displayed.

E	n	t	e	r	N	e	w	C	o	d	e	
.	.	.	.	.	.	.	.	.	.	.	.	

**Step 3.** You can key in your preferred 4-digit number then press “**OK**”.

**Step 4.** The following screen will be displayed.

R	e	p	e	a	t	N	e	w	C	o	d	e	
.	.	.	.	.	.	.	.	.	.	.	.	.	

You are requested to enter the same code again (as the one entered in Step 3)

**Step 5.** Key in the same code again, then press “**OK**”. If the code is correct, the following screen will ask you to enter the user’s name for reference:

E	n	t	e	r	N	e	w	N	a	m	e	
.	.	.	.	.	.	.	.	.	.	.	.	+ Ok

**Step 6.** You are now invited to give a name for this User who will be using this newly programmed code to help better understand system events. You can enter up to 10 letters as you want for the name followed by press “OK” or just press “OK” for no name. Please see section “**User Naming**” for details. Then, the screen returns to the “**PIN Code**” menu showing post-programmed status of each User PIN code:

*	1	)	M	R	.	S	M	I	T	H			
	2	)	M	R	S	.	S	M	I	T	H		
	3	)	*	*	*	*	*	*	*	*			
	4	)	.	.	.	.	.	.	.	.			

<NOTE>

- ☞ 2) “**MRS. SMITH**” representing the User #2 PIN code is set up and user name specified.
- ☞ 3) “**\*\*\*\*\***” representing this User #3 code is programmed without user name specified.
- ☞ 4) “**.....**” representing the User #4 code is not yet set up for activation.

**Step 8.** Proceed to set additional User PIN Codes as instructed from Step 2 ~ Step 7. When done, press “G” and the screen returns to “**General settings**” menu, setting the PIN code is completed.

<NOTE>

- ☞ In Step 5, if the code is not correct, a “Code is not correct” prompt message will be displayed 2 sec., and you are requested to repeat Step 3 to enter again.

## User Naming

Each individual User can be given a name for easy recognition when understanding system events. User Names can be named in the first-time setting or by resetting. The procedure is similar for both situations.

- When the “**Enter New Name**” screen is displayed, the keypad can be used to enter text. Simply locate the corresponding numeric keys to the desired alphabets/symbols and press repeatedly until the wanted alphabets/symbols appear. Release the key and the flashing cursor automatically jumps to the next position for you to continue with the next letter by the same method.
- The keys have the following functions:

1	1
2	2ABCabc
3	3DEFdef
4	4GHIghi
5	5JKLjkl
6	6MNOnno
7	7PQRSpqrs
8	8TUVtuv
9	9WXYZwxyz
0	0<space>/-&'.!"+

*	*
#	#
↶	Delete character and backspace

- When the name is complete, press “OK” to confirm and return to the previous or main menu.

<NOTE>

- ☞ The name can be erased or clearing the display by entering backward spaces “G” and pressing “OK”.

### ● To Delete User PIN code

Except User #1 which is activated by factory default and can't be deleted in any way, User#2, 3 and 4 PIN code can be deleted by following the steps below:

**Step 1.** Move the cursor to the item “**Pin Code**” then press “OK”, the following screen will show the status of each User PIN code:

*	1	)	M	R	.	S	M	I	T	H			
	2	)	M	R	S	.	S	M	I	T	H		
	3	)	*	*	*	*	*	*	*	*			
	4	)	.	.	.	.	.	.	.	.			

**Step 2.** Move the cursor to the desired # (2~4) of programmed user PIN code to be deleted, then press “OK” the following screen is displayed.

		D	e	l	e	t	e								
		P	i	n	-	C	o	d	e	(	+	O	k	)	?

**Step 3.** Press “OK” and the screen returns to previous one with the deleted User PIN code marked with “●●●●”.

### ● To Edit User PIN code

All 4 User PIN code can be edited freely by the following steps:

**Step 1.** Move the cursor to the item “Pin Code” then press “OK” the following screen will show the status of each User PIN code:

*	1	)	M	R	.	S	M	I	T	H				
	2	)	M	R	S	.	S	M	I	T	H			
	3	)	*	*	*	*	*	*	*					
	4	)	.	.	.	.	.	.						

**Step 2.** Move the cursor to the desired # (2~4) of programmed user PIN code to be deactivated/deleted, then press “OK” the following screen is displayed.

		D	e	l	e	t	e							
		P	i	n	-	C	o	d	e	(	+	O	k	)

**Step 3.** Press “G” key, the next screen will ask you to enter your new PIN code and repeat it for double confirmation.

**Step 4.** Follow the same steps as described in “Set your own pin code” to edit.

## 2. Temporary Code

- The Temporary Code is used to arm/disarm the system for a temporary user and is valid only once per Arming and once per Disarming. Afterwards, the Temporary Code is automatically erased and needs to be reset for a new Temporary user .
- The Temp. Code consists of 4 digits and is not activated as default by the factory.

### ● To Set Temporary Code

**Step 1.** Use the arrow keys to select “Temp. Code” and press “OK”

		E	n	t	e	r		N	e	w		C	o	d	e
												.	.	.	.

**Step 2.** You can key in your preferred 4-digit number and then press “OK”

		R	e	p	e	a	t		N	e	w		C	o	d	e
												.	.	.	.	

**Step 3.** You are prompted to re-enter the same code again and press “OK”

The screen returns to “General Setting” menu, setting the Temporary code is completed.

#### <NOTE>

- ☞ There is no User Naming feature for Temp. Code.

### ● To Delete Temp. Code

After the Temp. Code is programmed, it can be deleted by following the steps below:

**Step 1.** Move the cursor to the item “Temp. Code” then press “OK”.

		D	e	l	e	t	e							
		P	i	n	-	C	o	d	e	(	+	O	k	)

**Step 2.** Press “OK” and the screen returns to “Gen. Settings Menu”

### ● To Edit Temp. Code

After the Temp. Code is programmed, it can be edited by following the steps below:

**Step 1.** Move the cursor to the item “Temp. Code” then press “OK”.

		D	e	l	e	t	e							
		P	i	n	-	C	o	d	e	(	+	O	k	)

**Step 2.** Press “G” key, the next screen will ask you to enter your new Temp. code and repeat it for double confirmation.

**Step 3.** Press “OK”. The screen returns to “General Setting” menu, editing the Temporary code is now completed.

### 3. Duress Code

- Duress Code can arm/disarm the system. When this code is used for accessing the system, the Control Panel will report a secret alarm message without sounding the siren to the Call recipient to indicate of a **“Duress Situation in Progress”**.
- The Duress Code consists of 4 digits and is not activated as default by the factory.

#### ● To Set Duress Code

**Step 1.** Use the arrow keys to select **“Duress Code”** and press **“OK”**

	E	n	t	e	r		N	e	w		C	o	d	e	
							.	.	.	.					

**Step 2.** You can key in your preferred 4-digit number and then press **“OK”**

	R	e	p	e	a	t		N	e	w		C	o	d	e	
							.	.	.	.						

**Step 3.** You are prompted to re-enter the same code again and press **“OK”**

If the code is correct, the screen returns to **“General Setting”** menu, setting the Duress code is completed.

#### ● To Delete Duress Code

After the DuressCode is programmed, it can be deactivated/deleted by following the steps below:

**Step 1.** To delete programmed Duress code, select the **“Duress Code”** from the **“Gen. Setting Menu”**, then, the screen will show:

		D	e	l	e	t	e									
		P	i	n	-	C	o	d	e	(	+	O	k	)	?	

**Step 2.** Press **“OK”** to confirm.

#### ● To Edit Duress Code

After the DuressCode is programmed, it can be edited by following the steps below:

**Step 1.** To edit programmed Duress code, select the **“Duress Code”** from the **“Gen. Setting Menu”**, then, the screen will show:

		D	e	l	e	t	e									
		P	i	n	-	C	o	d	e	(	+	O	k	)	?	

**Step 2.** Press **“G”** key, the next screen will ask you to enter your new Duress code and repeat it for double confirmation.

**Step 3.** Press **“OK”** and editing the Duress code is completed.

### 4. Master Code

- Master Code is used for accessing the Programming mode and it is set to **“1111”** as factory default. Before you set your own Master PIN code, **“1111”** has to be keyed in every time it is required.
- To set your Master Code, follow the same steps as in setting the **“Duress Code”** described above.

#### ● To Edit Master Code

After the Master Code is programmed, it can be edited by following the same steps as in editing the Duress Code described above.

#### <NOTE>

- ☞ The Master code can not be deactivated (same as the User #1 PIN Code).
- ☞ The Master Code is used only when you enter the Programming mode. In other cases, only PIN Code should be entered.

#### <IMPORTANT NOTE>

When entering the following individual setting screens, the value displayed on the screen is the current setting of each item.

If it is not necessary to change the current setting, just press **“G”** to escape.

### 5. A. Entry Time

This is for you to select the Entry Delay time when Away Arming. Options available are 0 sec., 10 sec., 20 sec., up to 70 sec. in 10-sec increments.

		A.	E	n	t	r	y		T	i	m	e				
		2	0	s	e	c	.	(	^	V	O	K	)			

- Use “▲”, “▼” keys to switch between options.
- Press “OK” to confirm.
- 20 sec. is set as factory default.

<NOTE>

- ☞ Full Arm Entry time applies only to the zone that a Door Contact or PIR Detector is installed and is set to “Entry”.
- ☞ If incorrect PIN code is entered and/or the entry delay time has expired, then the system will trigger the Burglar alarm.

## 6. A. Exit Time

This is for you to select the Exit Delay time when Full Arming. Options available are 0 sec., 10 sec., 20 sec. up to 70 sec. in 10-sec increments.

		A.	E	x	i	t	T	i	m	e		
		3	0	s	e	c	.	(	^	V	O	K)

- Use “▲”, “▼” keys to switch between options.
- Press “OK” to confirm.
- 30 sec. is set as factory default.

<NOTE>

- ☞ Full Arm Exit time applies only to the zone that a Door Contact or PIR Detector is installed and is set to “Exit”.
- ☞ If incorrect PIN code is entered and/or the Exit delay time has expired, then the system will trigger the Burglar alarm

## 7. H. Entry Time

This is for you to select the Entry Delay time when Home Arming. Options available are 0 sec., 10 sec., 20 sec., up to 70 sec. in 10-sec increments.

		H.	E	n	t	r	y	T	i	m	e	
		2	0	s	e	c	.	(	^	V	O	K)

- Use “▲”, “▼” keys to switch between options.

- Press “OK” to confirm.
- 20 sec. is set as factory default.

<NOTE>

- ☞ Home Arm Entry Delay time applies only to the zone that a Door Contact or PIR Detector is installed and is set to “Entry”.
- ☞ If incorrect PIN code is entered and/or the entry delay time has expired, then the system will trigger the Burglar alarm

## 8. H. Exit Time

This is for you to select the Exit Delay time when Home Arming. Options available are 0 sec., 10 sec., 20 sec. up to 70 sec. in 10-sec increments.

		H.	E	x	i	t	T	i	m	e		
		3	0	s	e	c	.	(	^	V	O	K)

- Use “▲”, “▼” keys to switch between options.
- Press “OK” to confirm.
- 30 sec. is set as factory default.

<NOTE>

- ☞ Home Arm Exit Delay time applies only to the zone that a Door Contact or PIR Detector is installed and is set to “Exit”.
- ☞ If incorrect PIN code is entered and/or the Exit delay time is expired, then the system will trigger the Burglar alarm.

## 9. Door Chime

This is for you to decide whether the Control Panel will sound a Door Chime if the Door Contact or PIR Detector is activated at the Entry Point while the system is in Disarmed mode.

		D	o	o	r	C	h	i	m	e	H	i
		D	o	o	r	C	h	i	m	e	L	o
	*	D	o	o	r	C	h	i	m	e	O	f

- Press “▲”, “▼” keys to select the option followed by “\*” appearing next to the selected option.

- Press “OK” to confirm
- “Door Chime Off” is set as factory default.

<NOTE>

- ☞ When Door Chime is disabled, there will be no door chime when Entry point DC or PIR is triggered at Disarmed mode.
- ☞ When Door Chime is enabled, the system will make a “Ding-Dong” sound to inform user that a DC or PIR at Entry Point is triggered at Disarmed mode.

## 10. Time

This is for you to program the current time to be displayed. (hour & minute)

		<b>T</b>	<b>i</b>	<b>m</b>	<b>e</b>		<b>S</b>	<b>e</b>	<b>t</b>	<b>t</b>	<b>i</b>	<b>n</b>	<b>g</b>		
		0	0	:	0	0					(	▲	▼	OK	)

- Hour flashes first, use “▲”, “▼” keys to choose a correct number for the current hour. Hours are indicated by “00 ~ 23”.
- Press “OK” to confirm. Next, the screen will be displayed for you to set the correct minute.
- Minutes are then flashing.
- Use “▲”, “▼” keys to choose a correct number.
- Press “OK” to confirm.

## 11. Date

This is for you to set the current date.

		<b>D</b>	<b>a</b>	<b>t</b>	<b>e</b>		<b>S</b>	<b>e</b>	<b>t</b>	<b>t</b>	<b>i</b>	<b>n</b>	<b>g</b>		
		1	5		J	a	n				(	▲	▼	OK	)

- Months flash first, use “▲”, “▼” keys to choose the current Month.
- Press “OK” to confirm. Next, the screen will be displayed for you to set the current day.
- Days are then flashing.
- Use “▲”, “▼” keys to choose the correct day.
- Press “OK” to confirm.

## 12. Panel Siren

This is for you to decide to enable or disable the Control Panel built-in Siren when there is an alarm event.

		<b>S</b>	<b>i</b>	<b>r</b>	<b>e</b>	<b>n</b>	<b>O</b>	<b>n</b>						
		<b>S</b>	<b>i</b>	<b>r</b>	<b>e</b>	<b>n</b>	<b>O</b>	<b>f</b>	<b>f</b>					

- Press “▲” & “▼” keys to select the option.
- Press “OK” to confirm
- “Siren On” is set as factory default.

## 13. SMS filter

This is for you to enable or disable the SMS keyword Filtering function.

		<b>F</b>	<b>i</b>	<b>l</b>	<b>t</b>	<b>e</b>	<b>r</b>	<b>O</b>	<b>N</b>					
		<b>F</b>	<b>i</b>	<b>l</b>	<b>t</b>	<b>e</b>	<b>r</b>	<b>O</b>	<b>f</b>	<b>f</b>				

- Press “▲” & “▼” keys to select the option.
- Press “OK” to confirm
- “Filter On” is set as factory default.

<NOTE>

- ☞ When “Filter On” is chosen, the system will filter through all incoming SMS messages for “SMS Keyword” and automatically ignores and deletes SMS which does not contain the SMS keyword.
- ☞ If “Filter Off” is chosen instead, all incoming SMS will be saved for later reading except for authorized Remote Command SMS Messages.
- ☞ For all authorized Remote Command that comes with proper keyword and PIN code, the system will immediately carry out the contained command(s) and afterwards, automatically delete the SMS. For more detail on Remote Command via SMS, please refer to OPERATION, Section XVI Remote Commanding.

## IV. Special Settings.

This menu is for the user to store the specialized features for EAS/Z918/GSM system.

**Step 1.** Select Spc. Settings option..

**Step 2.** Press “OK”, then the Special Settings Menu will be displayed.

	A	l	a	r	m	L	e	n	g	t	h		
	A.	E	x	i	t	S	o	u	n	d			
	A.	E	n	t	r	y	S	o	u	n	d		
	H.	E	x	i	t	S	o	u	n	d			
	H.	E	n	t	r	y	S	o	u	n	d		
	S	i	r	e	n	D	e	l	a	y			
	V	e	r	i	f	i	c	a	t	i	o	n	
	F	i	n	a	l	D	o	o	r				
	I	n	t	e	r	f	e	r	e	n	c	e	
	R	C	E	n	t	E							
	M	o	b	i	l	i	t	y	C	H	K	.	
	T	a	m	p	e	r	A	l	a	r	m		
	S	u	p	e	r	v	i	s	i	o	n		
	S	e	t	G	.	P	-	C	o	d	e		
	S	t	o	p									

### <NOTE>

- ☞ *Interference function is used in 868 Mhz frequency band Control Panel only.*
- ☞ Use “▲” & “▼” to move the cursor to select the item, press “OK” to confirm the selection.
- ☞ “\*” displayed in front of an option indicates the current setting.
- ☞ In “**Spc. Settings**”, if no key is pressed within 10 minutes, the Control Panel will automatically exit this menu and return to “**Alarm Off**” display.

### 1. Alarm length

This is for you to select the period of time that the built-in siren will sound when an alarm is activated. You can choose from 1 min. to 15 min. in 1-min increments.

	A	l	a	r	m	L	e	n	g	t	h		
	3		m	i	n	.	(	^	V	O	K	)	

- Use “▲” & “▼” keys to switch between options.
- Press “OK” to confirm.
- 3 minutes is set as factory default.

### 2. A. Exit Sound

This is for you to decide whether the Control Panel will sound short beeps during the Exit Delay period when in Away Arming.

	E	x	i	t	S	n	d	H	i			
	E	x	i	t	S	n	d	L	o			
	E	x	i	t	S	n	d	O	f			

- Press “▲” & “▼” keys to select the option. Options available are “Hi” for high volume, “Lo” for low volume and “Off” for no entry sound
- Press “OK” to confirm
- “Exit Snd Lo” (Exit sound Low) is set as factory default.

### 3. A. Entry Sound

This is for you to decide whether the Control Panel will sound short beeps during the Entry Delay Period when Away Arming.

	E	n	t	r	y	S	n	d	H	i		
	E	n	t	r	y	S	n	d	L	o		
	E	n	t	r	y	S	n	d	O	f		

- Press “▲” & “▼” keys to select the option.
- Press “OK” to confirm.
- “Entry Snd Lo” (Entry Sound Low) is set as factory default.

### 4. H. Exit Sound

This is for you to decide whether the Control Panel will sound short beeps during the Exit Delay period when Home Arming.

	E	x	i	t	S	n	d	H	i			
	E	x	i	t	S	n	d	L	o			
	E	x	i	t	S	n	d	O	f			

- Press “▲” & “▼” keys to select the option.
- Press “OK” to confirm
- “Exit Snd Lo” (Exit sound Low) is set as factory default.

## 5. H. Entry Sound

This is for you to decide whether the Control Panel will sound short beeps during the Entry Delay Period when Home Arming.

	E	n	t	r	y	S	n	d	H	i		
	E	n	t	r	y	S	n	d	L	o		
	E	n	t	r	y	S	n	d	O	f	f	

- Press “▲” & “▼” keys to select the option.
- Press “OK” to confirm.
- “**Entry Snd Lo**” (Entry Sound Low) is set as factory default.

## 6. Siren Delay

This is for you to decide how long should the Control Panel suppress all audible alarms after an Burglar alarm is reported. Options are “OFF” and 1-min delay to 10-min delay in increments of 1 minute

	O	f	f									
	1	M	i	n	.							
	2	M	i	n	.							
	3	M	i	n	.							
	4	M	i	n	.							

to

	1	0	M	i	n	.						
--	---	---	---	---	---	---	--	--	--	--	--	--

- Press “▲” & “▼” keys to select the option.
- Press “OK” to confirm.
- “**Off**” is set as factory default.

## 7. Verification

Turn on and off the Sequential Verification Reporting.

	S	e	q	.	V	e	r	i	f	.	O	f	f
	S	e	q	.	V	e	r	i	f	.	O	n	

- Press “▲” & “▼” keys to select the option.
- Press “OK” to confirm.
- “**Seq.Verif.Off**” (Sequential Verification Off) is set as factory default.

### <NOTE>

- ☞ For detailed description of this feature, please refer to Sec. X, “False Alarm Management” of “**Configuring your system**”

## 8. Final Door

Turn on and off the Final Door Set Option.

	F	i	n	a	l	D	o	o	r	O	f	f
	F	i	n	a	l	D	o	o	r	O	n	

- Press “▲” & “▼” keys to select the option.
- Press “OK” to confirm.
- “**FinalDoor On**” (Final Door Set Option On) is set as factory default.

### <NOTE>

When “**Final Door Arming**” is programmed, the Control Panel will arm after the entry door is closed. For more description of this feature, please refer to Sec. II “**Away (Alarm On) Mode**” of “**Operation**”

## 9. Interference

Turn on and off the detection feature of interference.

	D	e	t	e	c	t	i	o	n	O	f	f
	D	e	t	e	c	t	i	o	n	O	n	

- Press “▲” & “▼” keys to select the option.
- Press “OK” to confirm.
- “**Detection Off**” is set as factory default.

### <NOTE>

- ☞ When the “**Detection On**” is selected, whenever the signal jamming period lasted longer than 30 seconds, this fault event will be logged, and displayed on the LCD to warn the user.

- ☞ When the “**Detection Off**” is selected, EAS/Z918/GSM will not check interference status.

## 10. Remote Controller Entry Enable

Turn on and off the Remote Controller disarm function.

		R	C	E	n	t	E	O	f	f		
		R	C	E	n	t	E	O	n			

- Press “▲” & “▼” keys to select the option.
- Press “OK” to confirm.
- “Remote Controller Entry Enable off” is set as factory default.

### <NOTE>

☞ When the “Remote Controller Entry Enable” is set to “Off” it will not be possible to disarm the Control Panel when the system is fully armed unless an entry point device is activated first. This feature is used to ensure that the system cannot be disarmed with a stolen Remote Control without unlocking a door first.

☞ When the “Remote Controller Entry Enable” is set to “On”, the Remote Controller can Arm and Disarm the Control Panel as normal without activating an entry point first.

## 11. Mobility

This is to disable or enable the Mobility Timer with selected countdown period. Options available are **Disable, 4 hours, 8 hours and 12 hours.**

If the Mobility Timer is enabled, it will count down the pre-programmed time length. When the timer times out without being reset, a report will be made to the Programmed phone numbers.

		D	i	s	a	b	l	e				
		4	H	r	s							
		8	H	r	s							
		1	2	H	r	s						

- Use “▼” & “▲” keys to select the options.
- Press “OK” to confirm.
- “Disable” is set as factory default.

### <NOTE>

☞ When the “Mobility” is set with a specified timer, the Control Panel will report to the Programmed phone numbers when the timer runs out unless one of the following actions occurred in advance to reset the timer:

- ◆ In “Home” mode: whenever any “Home Omit” DC, IR is triggered, or whenever any of the keys of the Control Panel is pressed
- ◆ In “Disarm” mode: whenever any of the DC or IR (except **24 Hr, Fire, Medical Emergency and Water**) is triggered, or whenever any of the keys of the Control Panel is pressed

☞ When the system is set to “Away Arm”, the timer automatically stops. When the system enters “Home Arm” or “Disarm” mode, the timer automatically starts again.

## 12. Tamper Alarm

This extra option is to choose for Tamper Alarm of unauthorized sabotage to the devices only when the system is “Away Armed” in addition to the normal operational directive of Tamper Alarm.

		A	w	a	y	A	r	m	O	n	l	y	
		N	o	r	m	a	l						V

- Use “▼” & “▲” keys to select the options.
- Press “OK” to confirm.
- “Normal” is set as factory default.

## 13. Supervision

This extra option is used to enable system supervision function. When this option is chosen “ON”, EAS/Z918/GSM will be able to receive the check-in signals from its system devices to indicate their proper functioning.

		D	i	s	a	b	l	e				
		4	H	o	u	r	s					
		6	H	o	u	r	s					
		8	H	o	u	r	s					
		1	2	H	o	u	r	s				

- Use “▼” & “▲” keys to select the options.
- Press “OK” to confirm.
- “6 Hours” is set as factory default.

## 14. Set G.P-Code

Before proceeding with this step, the SIM Card must be inserted and the Control Panel must have already been powered on for longer than 3 minutes. After above mentioned condition is met, this step is for you to set the PIN code of the GSM SIM card.

Move the cursor to the “**Set G.P-Code**”, and then press “**OK**”. The display will prompt you to enter the PIN code of your SIM card:

E	n	t	e	r	N	e	w	(	+	0	K)		
P	-	C	o	d	e			.	.	.	.		

- Enter your new GSM PIN Code and confirm by pressing “**OK**”.
- The screen will then display a message prompt saying, “Wait for a minute. Please”
- Afterward, another message prompt will confirm, “Pin-Code has been changed” and the display automatically return to the “**Special Setting Menu**”.

### <NOTE>

☞ Press “**G**” to escape and the screen returns to “**Special Setting Menu**”

### ● Change GSM Pin Code

GSM Pin Code can be changed at user’s discretion.

- When Old Pin Code is requested, enter Old Pin Code followed by OK.
- Proceed to “**Set G.P-Code**” as instructed in this section.

## 15. Stop

Press “**OK**” to return to the previous menu.

## V. Add / Delete Device

If “**Devices +/-**” is selected in Programming Main menu, the “**Device +/-**” menu is displayed. From here you can edit all the devices previously learnt-in, add or delete devices including the external sirens.

		A	d	D	e	v	i	c	e				
		E	d	i	t	D	e	v	i	c	e	s	
		R	e	m	o	v	e	D	e	v	i	c	e
		P	r	o	g	r	a	m	S	i	r	e	n
		I	n	p	u	t	C	o	n	f	i	g	.

### 1. Adding Devices

**Step 1.** To learn in a sensor, move the cursor to the position “**Add Device**”, then press “**OK**”, a prompting message is displayed.

*	P	u	s	h	B	u	t	t	o	n	O	n	*
	D	e	v	i	c	e	t	o	A	d	d	!	

**Step 2.** Press the test button on the sensor or any button on the Remote Controller.

**Step 3.** If a signal is detected, the screen will show you the type of the device on the second line.

		D	e	t	e	c	t	e	d	(	O	k	?)
		D	o	o	r	C	o	n	t	a	c	t	

### <NOTE>

☞ The categories of devices are listed as followings:

- ✓ Door Contact ---- DC
- ✓ PIR Sensor ----- IR
- ✓ Remote Controller --- RC
- ✓ Remote Keypad ---KP
- ✓ Smoke Detector --- SD
- ✓ Water Sensor --- WS
- ✓ Indoor Siren --- SR
- ✓ Outdoor Siren --- BX
- ✓ Night Switch --- NS
- ✓ Universal Receiver -- UR

**Step 4.** Press “OK” to confirm the device type. A prompting message will be displayed for 2 sec. to prompt you to select the zone number for the device.

S	e	L	e	c	t	D	e	v	i	c	e		
	Z	o	n	e									

**Step 5.** Then all the available unused zones (zones which have no device added in) out of a total 20 zones will be displayed on the screen.

	Z	o	n	e	0	1							
	Z	o	n	e	0	2							
	Z	o	n	e	0	3							
	Z	o	n	e	0	4							
	Z	o	n	e	0	5							
	Z	o	n	e	0	6							
	Z	o	n	e	0	7							
	Z	o	n	e	0	8							
	Z	o	n	e	0	9							
	Z	o	n	e	1	0							

**Step 6.** Use “▲” & “▼” keys to move the cursor to the desired zone number then press “OK”.

<NOTE>

☞ When a sensor is added to the system for the second time (without removing first). An error message will be displayed.

A	L	r	e	a	d	y	E	x	i	s	t		
	i	n	s	y	s	t	e	m					

The message will be displayed for 2 sec. then the screen return to Step 1. screen to wait for the signal from another device.

☞ Pressing “G” key will abort the procedure and will not learn-in the device.

☞ Depending the type of the device, different screens will then be displayed accordingly for further configuration purpose.

Door Contact

**StepA7.** After a zone number for the Door Contact is assigned, you can futher specify how it will work in different modes. You are requested to make a selection among “**Burglar**”, “**Home Omit**”, “**Home Access**”, “**Delay**”, “**Entry**”, “**Away Only**”, “**24 Hour**”, “**Fire**”, “**Medical Emg**” and “**Water**” device.:

	B	u	r	g	l	a	r						
	H	o	m	e	O	m	i	t					
	H	o	m	e	A	c	c	e	s	s			
	D	e	l	a	y								
	E	n	t	r	y								
	A	w	a	y	O	n	l	y					
	2	4	H	o	u	r							
	F	i	r	e									
	M	e	d	i	c	a	l	E	m	g			
	W	a	t	e	r								

<NOTE>

☞ “**B**” for Burglar Door Contact

- When the system is in Arm mode, if a “**Burglar**” Door Contact is triggered, a “**Burglar Alarm**” will be activated immediately and be reported.
- When the system is in Armed mode, and the Control Panel is counting down the Entry Delay, if a “**Burglar**” Door Contact is triggered, the Control Panel will not respond.
- During the Exit Delay period, if a “**Burglar**” Door Contact is triggered, the Control Panel will not respond .

☞ “**O**” for Home Omit Door Contact

- When the system is in Home mode, if a “**Home Omit**” Door Contact is triggered, the Control Panel will not respond.
- When the system is in Full Arm mode, if a “**Home Omit**” Door Contact is triggered, the Control Panel will respond in the same way as if a “**Burglar**” Door Contact is triggered.

☞ **“A” for Home Access Door Contact**

- When the Door Contact has been set to **“Home Access”** and triggered when the system is in Arm mode, the Control Panel will start a Burglar Alarm and be reported.
- When the system is in Home mode, if a **“Home Access”** Door Contact is triggered, the Control Panel will start an Entry Delay period to give enough time to disarm the system
- However, during the Entry Delay or Exit Delay period, if a **“Home Access”** Door Contact is triggered, the Control Panel will not respond.

☞ **“D” for Delay Door Contact**

- When the system is in Arm mode, if a **“Delay”** Door Contact is triggered first, a **“Burglar Alarm”** will be generated immediately.
- However, during the Entry Delay or Exit Delay period, if a **“Delay”** Door Contact is triggered, the Control Panel does not respond.

☞ **“E” for Entry Door Contact**

- If the Door Contact has been set to **“Entry”** and triggered when the system is in Arm mode, the Control Panel will start an entry period to give enough time to disarm the system.
- After the delay period has expired and no correct PIN code entered, the Control Panel will respond with a **“Burglar Alarm”** and be reported.
- If the Door Contact has been set to **“Entry”** and triggered when the system is in Disarmed mode, the Control Panel will make a **“ding-dong”** Door Chime sound (if programmed).

☞ **“H” for 24 Hour Door Contact**

- The **“24 Hour”** Door Contact is active all the time and does not have to be armed or disarmed.

☞ **“F” for Fire Door Contact**

- The **“Fire”** Door Contact is active all the time and does not have to be armed or disarmed.

☞ **“M” for Medical Emergency Door Contact**

- A **“Medical Emg”** Door Contact is active all the time and does not have to be armed or disarmed.

☞ **“W” for Water Door Contact**

- **“Water”** Door Contact acts as an Universal Transmitter and have a Water leakage sensor connected to it.
- The **“Water”** Door Contact is active all the time and does not have to be armed or disarmed.

**StepA8.** Use the **“▼,”▲”** to make your selection and confirm by pressing **“OK”**. You are now invited to give a name or location description to the device to help understand system events. You can enter up to 10 letters as you want for the name followed by **“OK”** or just press **“OK”** for no name. Please see section **“Device Naming”** for details.

E	n	t	e	r		N	a	m	e		+	O	k				
.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.

**StepA9.** Press **“OK”** when zone name entering is completed. The display will show the new zone name with the attribute next to the device and prompt you to confirm your programming:

I	n	s	t	a	l	l	e	d	:		(	O	K	?)	)		
D	C		B	a	c	k	d	o	o	r		B					

**StepA10.** Press **“OK”**, adding a Door Contact is now completed, screen returns to the **“Device +/-”** menu.

<NOTE>

- ☞ Press **“G”**, all the learning/setting processes having done will be ignored, the screen returns to **“Device +/-”** menu.

## PIR Detector

**StepB7.** After a zone number for the PIR is assigned the following choice screen is displayed.

	B	u	r	g	l	a	r							
	H	o	m	e		O	m	i	t					
	H	o	m	e		A	c	c	e	s	s			
	D	e	l	a	y									
	E	n	t	r	y									
	A	w	a	y		O	n	l	y					

### <NOTE>

- ☞ For a PIR Detector, you may choose between “**Burglar**”, “**Home Omit**”, “**Home Access**”, “**Delay**”, “**Entry**” and “**Away Only**”.
- ☞ For detailed functional description of PIR Detector in these 4 different device modes, please refer to the Note section following Step A7 for adding Door Contact.
- ☞ “**B**” for Burglar PIR Detector
- ☞ “**O**” for Home Omit PIR Detector.
- ☞ “**A**” for Home Access PIR Detector.
- ☞ “**D**” for Delay PIR Detector.
- ☞ “**E**” for Entry PIR Detector.

**StepB8.** Use the “▼”, “▲” to make your selection and confirm by pressing “OK”. You are now invited to give a name or location description to the device to help understand system events. You can enter up to 10 letters as you please for the name followed by “OK” or just press “OK” for no name. Please see section “**Device Naming**” for details.

E	n	t	e	r		N	a	m	e		+	O	k							
.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.

**StepB9.** Press “OK” when finished and the display will show The display will show the newl zone name and the attribute next to the device:

I	n	s	t	a	l	l	e	d	:		(	O	K	?)					
I	R		H	a	l	l	w	a	y		E								

**StepB10.** Press “OK”, adding a PIR is now completed, screen returns to the “**Device +/-**” menu.

### <NOTE>

- ☞ Press “↶”, all the learning/setting processes having done will be ignored, the screen returns to “**Device +/-**” menu.

## Remote Controller

**StepC7.** After a zone number for the RC is assigned the following choice screen is displayed.

		P	e	r	s	o	n	a	l		A	t	t							
		M	e	d	i	c	a	l		E	m	g								

### <NOTE>

- ☞ For a Remote Controller, you may choose between “**Personal Attack**”, and “**Medical Emergency**” device mode.
- ☞ “**P**” for Personal Attack Remote Controller
- Control Panel will give a “**Personal Attack**” alarm when the panic button is pressed for 3 seconds long or twice within 3 seconds.
- ☞ “**M**” for Medical Emergency Remote Controller

Control Panel will give a “**Medical Emergency**” alarm when the panic button is pressed for 3 seconds long or twice within 3 seconds.

**StepC8.** Use the “▼”, “▲” to make your selection and confirm by pressing “OK”. The next display will prompt you to give a name or location description to the device to help understand system events. You can enter up to 10 letters as you please for the name.

**StepC9.** Or simply press “OK” for no name. Please see section “**Device Naming**” for details.

E	n	t	e	r		N	a	m	e		+	O	k							
.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.

**StepC10.** Press “OK” when finished and the display will show the new zone name next to the device:

I	n	s	t	a	l	l	e	d	:		(	O	K	?)					
R	C		M	R	.	S	M	I	T	H									

**StepC11.** Press “OK”, adding a RC is now completed, screen returns to the “Device +/-” menu.

<NOTE>

- ☞ After a Remote Controller is added in, you can use the Remote Controller to arm/disarm the system. In addition, pressing the “Panic” button for 3 seconds or twice within 3 seconds, the Control Panel will generate a Panic alarm.
- ☞ The “Panic” alarm generated from the Remote Controller will have to be silenced at the Control Panel only. See section “Stop the Alarm”.
- ☞ Press “G”, all the learning/setting processes having done will be ignored, the screen returns to “Device +/-” menu.

**Other Devices**

For Smoke Detector, Remote Keypad, Water Sensor and Night Switch, no further option needs to be specified, hence after it is detected, a zone is assigned, and the zone name entered, the following screen is displayed.

I	n	s	t	a	i	l	e	d	:		(	O	K	?)
S	D		L	i	v	i	n	g	r	o	o	m		

Press “OK” to confirm, adding a smoke detector, or a Remote Keypad or a Water Sensor or a Night Switch is now completed.

**Device Naming**

Detectors can be given names and location descriptions to help understand system events. The devices can be named when first installing them or by editing them afterwards, the procedure is similar for both situations.

- When the “Enter zone Name” screen is displayed, the keypad can be used to enter text. Simply locate the corresponding numeric keys to the desired alphabets/symbols and press repeatedly until the wanted alphabets/symbols appear. Release the key and the flashing cursor automatically jumps to the next position for you to continue with the next letter by the same method.

- The keys have the following functions:

1	1	*	*
2	2ABCabc	#	#
3	3DEFdef	↶	Delete character and backspace
4	4GHIghi		
5	5JKLjkl		
6	6MNOmno		
7	7PQRSpqrs		
8	8TUVtuv		
9	9WXYZwxyz		
0	0<space>/-&'.'"+		


- When the name is complete, press “OK” to confirm and return to the previous or main menu.

<NOTE>

- ☞ The name can be erased or clearing the display by entering backward spaces and pressing “OK”.

**Device Display Nomenclature**

The devices are displayed throughout the menus and especially where there are zone lists. The meanings of the display components are shown in an example below:

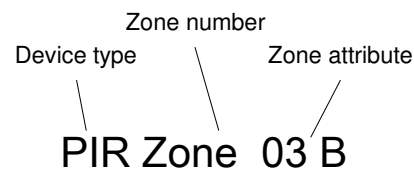

The PIR detector is in zone 03, programmed for burglar mode.

**2. Edit Devices**

To edit all the devices that have already been installed, choose “Edit Devices” in the “Device +/-” menu, all the devices being included in the system will be displayed. You may Press “G” to exit.

		D	C	B	a	c	k	d	o	o	r			
		I	R	H	a	l	l	w	a	y				
		R	C	M	R	.	S	M	I	T	H			
		S	D	K	i	t	c	h	e	n				
		S	t	o	p									

**Step1A.** Use “▲”, “▼” keys to scroll the display and choose the desired device for editing. For DC, IR and RC, when selected by pressing “OK”, the first screen will ask if you want to change the device attribute:

	B	u	r	g	l	a	r							
	H	o	m	e		O	m	i	t					
	H	o	m	e		A	c	c	e	s	s			
	E	n	t	r	y									
	2	4		H	o	u	r							
	F	i	r	e										
	M	e	d	i	c	a	l		E	m	g			
	W	a	t	e	r									

If no changes is wished here, press “⏪” to skip to Step 3A.

**Step2A.** Use “▲”, “▼” keys to scroll the display and choose the desired device attribute by pressing “OK”. The screen will show:

Z	o	n	e		T	y	p	e	?	(	O	k	?)	)
D	C		B	a	c	k	d	o	o	r		E		

**Step3A.** Press “OK” to confirm. The next screen will ask if you want to change the name

P	r	o	g	r	a	m		N	a	m	e		?	
B	a	c	k	d	o	o	r							

**Step4A.** Press “⏪”, if re-naming is not required to exit to the previous device list or press “OK” if you wish to edit the zone name:

E	n	t	e	r		N	a	m	e		+	O	k	
.	.	.	.	.	.	.	.	.	.	.	.	.	.	.

**Step5A.** Edit the zone name and press “OK” when completed to return to the previous device list.

**Step6A.** Proceed to edit other devices or Press “⏪” to return to “Add/Delete Device” menu.

## To Edit Other Devices (SD/ KP/ WS/NS)

**Step1B.** Use “▲”, “▼” keys to scroll the display and choose the desired device for editing. When selected by pressing “OK”, the first screen will ask if you want to change the zone name. To confirm, press “OK” or press “⏪” to exit.

P	r	o	g	r	a	m		N	a	m	e		?	
B	a	c	k	d	o	o	r							

**Step2B.** Press “OK” if you wish to edit the zone name:

E	n	t	e	r		N	a	m	e		+	O	k	
.	.	.	.	.	.	.	.	.	.	.	.	.	.	.

or press “⏪” to exit to the previous device list.

**Step3B.** Edit the zone name and press “OK” when completed and return to the previous device list.

**Step4B.** Proceed to edit other devices or Press “⏪” to return to “Add/Delete Device” menu.

## 3. Remove Devices

Adding a device a second time is prohibited unless it is removed from the system first. To delete a device, choose “Remove Device” in the “Device +/-” menu

**Step 1.** Use “▲”, “▼” keys to scroll the display. All the used zones with the device names are listed in order of the zone numbers.

	D	C		B	a	c	k	d	o	o	r			
	I	R		H	a	l	l	w	a	y				
	R	C		M	R	.	S	M	I	T	H			
	S	D		K	i	t	c	h	e	n				

**Step 2.** Press “OK” when the required device is chosen. The following prompt message will be displayed for you to reconfirm.

	R	e	m	o	v	e	:			(	O	k	?)	)
R	C		M	R	.	S	M	I	T	H				

**Step 3.** Press “OK”. Deleting a device is now completed. The screen returns to previous device list.



<NOTE>

☞ The Siren tamper disable will automatically revert to “On” after about an hour if not switched back.

● **Confirm On, Confirm Off**

Both the Outdoor Siren BX-7 and the Indoor Siren SR-7 can be enabled for arming and disarming confirmation where beeps are emitted from the Siren to validate that the system has been armed and disarmed.

- Disable the Siren Confirmation by selecting “**Confirmation Off**” and press “OK”.
- Enable the Siren Confirmation by selecting “**Confirmation On**” and press “OK”.

● **Entry Snd On, Entry Snd Off**

The Indoor Siren SR-7 can be enabled or disabled from sounding the Entry Delay warning beeps.

- Disable the Siren Entry Sound by selecting “**Entry Snd Off**” and press “OK”.
- Enable the Siren Entry Sound by selecting “**Entry Snd On**” and press “OK”.

● **Receiver 1, Receiver 2**

2 additional Universal Receivers can be added to the system.

**Step 1.** Put Universal Receivers into learn mode (Refer to their individual Operational Manual).

**Step 2.** Move the cursor to the position “**Receiver 1**”

**Step 3.** Press “OK”.

**Step 4.** The Control Panel will then sound a long beep and transmit Learning code to UR#1 simultaneously. The UR status LED lights up for 3 seconds.

<NOTE>

☞ If Receiver 2 is also to be added to the system, proceed to the following steps:

**Step 5.** Move the cursor to the position “**Receiver 2**”.

**Step 6.** Press “OK”.

**Step 7.** The Control Panel will then sound a long beep and transmit Learning code to UR#2 simultaneously. The UR status LED lights up for 3 seconds.

**Step 8.** Remember to put these Universal Receivers out of Learn mode. Adding them into the system is completed.

**5. Input Configuration**

EAS/Z918/GSM is equipped with 2 sets of terminals for connection to wired alarm devices. Based on individual requirement, these terminals can be factory set to be both **INPUTS**, or both **OUTPUTS** or **INPUT&OUTPUT** combination.

**EAS/Z918/GSMB**

**1 Input + 1 Output**

To program INPUT to consequently command the auxiliary device, select “**Input Config.**” in the “**Device +/-**” menu.

**Step 1** The LCD display will show the following options for Terminal 1 programming:

		D	i	s	a	b	l	e				
		N	o	r	m	a	L	O	p	e	n	
		N	o	r	m	a	I	C	l	o	s	e

**Step 2.** Use “▲”, “▼” keys to scroll the display and choose the desired option for operation of Terminal 1 with “OK”.

**Step 6.** If “**Normal Open**” or “**Normal Close**” is chosen, the LCD display will further request you to choose the device mode for the device that is wired into Terminal 1:

		B	u	r	g	L	a	r	y			
		F	i	r	e							

<NOTE>

☞ “**B**” for **Burglar Device**

- When the system is in Arm mode, if a “**Burglar**” Device is triggered, a “**Burglar Alarm**” will be activated immediately.
- When the system is in Armed mode, the Control Panel is counting down the Entry Delay, if a “**Burglar**” Device is triggered, the Control Panel does not respond.

- During the Exit Delay period, if a “**Burglar**” Device is triggered, the Control Panel does not respond .

☞ “**F**” for **Fire** Device

- The “**Fire**” Device is active all the time and does not have to be armed or disarmed..

● **Output**

- The device connected to the Output Terminal (T2) can then be controlled by SMS Remote Commands. See Section “**SMS Remote Command**” under **OPERATION CHAPTER**.

**EAS/Z918/GSMBS**

**2 Inputs**

When both terminal T1 and T2 are set to be both **INPUTS**, to program these auxiliary devices, select “**Input Config.**” in the “**Device +/-**” menu.

		T	e	r	m	i	n	a	l	1				
		T	e	r	m	i	n	a	l	2				

● **Terminal 1**

- If there is any wired detector to add to the system,

**Step 1.** Connect the 2 wires of the device into Input terminal #1.

**Step 2.** On the Control Panel LCD, move the cursor to the position “**Terminal 1**”.

**Step 3.** Press “**OK**”.

**Step 4.** The LCD display will show the following options for Terminal 1 programming:

		D	i	s	a	b	l	e						
		N	o	R	m	a	l		O	p	e	n		
		N	o	R	m	a	l		C	i	o	s	e	

**Step 5.** Use “**▲**,” “**▼**” keys to scroll the display and choose the desired option for operation of Terminal 1 with “**OK**”.

**Step 6.** If “**Normal Open**” or “**Normal Close**” is chosen, the LCD display will further request you to choose the device mode for the device that is wired into Terminal 1:

		B	u	r	g	l	a	r	y					
		F	i	r	e									

<**NOTE**>

☞ “**B**” for **Burqlar** Device

- When the system is in Arm mode, if a “**Burglar**” Device is triggered, a “**Burglar Alarm**” will be activated immediately..
- When the system is in Armed mode, the Control Panel is counting down the Entry Delay, if a “**Burglar**” Device is triggered, the Control Panel does not respond.
- During the Exit Delay period, if a “**Burglar**” Device is triggered, the Control Panel does not respond .

☞ “**F**” for **Fire** Device

- The “**Fire**” Device is active all the time and does not have to be armed or disarmed.

● **Terminal 2**

- Proceed to program Terminal 2 following the same instruction as described above for Terminal 1.

**EAS/Z918/GSMBR**

**2 Outputs**

When T1 and T2 is factory set to be both **OUTPUTS**, the devices connected to the **OUTPUT** Terminal(s) can then be controlled by SMS Remote Commands. See Section “**SMS Remote Command**” under **OPERATION Section**.

## VI. SMS Editor

For sending a SMS alarm reporting to your mobile phone, edit your SMS message by selecting “**SMS Editor**“ in Programming Main menu.

		E	d	i	t	S	c	r	e	e	n			

### 1. Editing SMS message

**Step 1.** During this display, compose your own SMS message of up to 16x4=64 characters maximum. Press “**OK**” to confirm.

The keypad can be used to enter text, similar to the “**testing**” method being utilized for the mobile phones

The keys have the following functions:

1	1	*	*
2	2ABC(abc)	#	#
3	3DEF(def)	▲	Backward space
4	4GHI(ghi)	▼	Forward space
5	5JKL(jkl)	↶	Delete character and backspace
6	6MNO(mno)		
7	7PQRS(pqrs)		
8	8TUV(tuv)		
9	9WXYZ(wxyz)		
0	0<space>/-&'."+:		

‘When the message is completed, press “**OK**” to see the next display:

		S	a	v	e									
		Q	u	i	t									

Press “**Save**” to save the newly edited SMS or exit this section back to Programming Menu by press “**Quit**”.

**Step 2.** Press “**OK**” when the cursor is moved to the choice of your decision.

When “**Save**” is chosen, the saved SMS message will be sent when any alarm is triggered and displayed again on the LCD when the “**SMS Editor**” is selected again.

## VII. SMS Keyword

For sending remote commands to control the operation of the Receiver 1 & 2 and Outputs using SMS message, a personalized password is required for EAS/Z918/GSM to recognize your authority. To set a personalized keyword different from “**Pin Code**” (factory default), select “**SMS Keyword**“ in Programming Main menu.

C	h	a	n	g	e	K	e	y	w	o	r	d	?
P	i	n	c	o	d	e							+ OK

### 1. Keyword Editor

**Step 1.** Press “**OK**” to confirm.

**Step 2.** The next display will prompt you to enter your preferred “keyword” from minimum of 1 character to a maximum of 10-character and press “**OK**” when done. .

K	e	y	w	o	r	d	e	d	i	t	o	r		
.	.	.	.	.	.	.	.	.	.	.	.	.	+ OK	

**Step 3.** The system returns to Main Programing Menu automatically.

#### <NOTE>

- ☞ If there is no character entered, there is no “Keyword” set up in the system.
- ☞ Without “Keyword” programmed in the system, Remote Commanding of EAS/Z918/GSM’s Receivers and Outputs via SMS will also be disabled..

## VIII. Country Code

If the user send a SMS message ended by “00”, EAS/Z918/GSM will study the telephone number from the received message ,then, send a confirmation message back.

However, each service provider may add different pre-fix code in front of the telephone number, which mostly is the country code. Therefore, when EAS/Z918/GSM is sending the confirmation message, the pre-fixed country code may need to be delected in some cases.

So, if the confirmation message can be send successfully, you can escape this section.

But, if the message sending is unsuccessful, you will need to delect the pre-fixed country code first.

**Step 1.** To enter the country code, press “OK” for select Country Code menu then press “OK” and the following screen will appear. Key in user’s country code then press “OK”.

		C	o	u	n	t	r	y		C	o	d	e			
.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.

For example:

Norway’s country code is 47, so you then type 47 under the country code. It becomes as the following.

		C	o	u	n	t	r	y		C	o	d	e			
4	7	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.

**Step 2.** Press “OK”. The next screen displays.

		R	e	p	l	a	c	e	m	e	n	t				
.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.

Under most of the conditions, you will not need to do the setting up for Replacement. Just press “OK” and the screen will automatically return to the main Program selection list.

You can try to see if the confirmation message has been successfully send to you or not. If yes, escape this section.

**Step 3.** If the message sending process is still unsuccessful, please try to add an “0” or “00” or any digits depending on how you normally dial your mobile phone number in the replacement.

For Example:

		R	e	p	l	a	c	e	m	e	n	t				
0	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.

**Step 4.** Press “OK” and the screen will automatically return to the main Program selection list.

Please try again to see if the confirmation message has been send successfully or not. If not, please go back to **Step 1** and change your country code.

For example, for Norway, you can try to type 047 instead of 47 in this case.

## IX. GSM Signal

EAS/Z918/GSM utilizes GSM as its telephone interface for communication purpose. The GSM signal can be monitored by selecting “GSM Signal” in the Programming Main Menu.

 
 
G	S	M		S	i	g	n	a	l							
		P	l	e	a	s	e		W	a	i	t				

The current GSM signal strength in RSSI scale ( “0” ~ “9” with 9 being the highest strength value) will be displayed on LCD and may change due to change of environment.

G	S	M		S	i	g	n	a	l						
		G	S	M		R	S	S	I	=		7			

## X. Walk Test

- When “Walk Test” is selected, the Green & Yellow LED’s will flash 3 times with 3 beeps, and the following two test patterns are displayed for 2 sec. each.



- Then the following message is displayed:

*				W	a	l	k		T	e	s	t			*

- Pressing the test button on the sensor or any button on the Remote Controller or triggering the sensor, if the Control Panel received the signal, it will sound 2 short beeps and the display will show you which sensor with its zone number is reacting and the RSSI strength.

I	R			Z	o	n	e	0	2		D				
H	a	i	i	w	a	y					R	=	0	9	

- The message will be displayed for 30 sec. or being replaced by another test signal.
- Pressing “G” key, the screen will return to “Walk Test” banner.

### <NOTE>

- ☞ The function of showing its RSSI strength (e.g. “R=09”) is only available in 868 MHz Control Panels.

● **Exit “Walk Test”**

- To exit “Walk Test” mode, press ” G “ key.
- If no test signals are received for 5 minutes, the Control Panel will exit “Walk Test” mode and return to “Alarm Off”. Press “OK” key to add another 5 minutes.

## XI. Reset GSM

GSM module will be reset once you have press “OK”. Please wait for 1 minute for the reset process to be activated.

## Operation

### I. Entering User Menu

When the system is in Disarmed mode (Alarm off), entering a valid user code can access the user menu, the system can then be Away armed or Bypass armed via this menu.

When the first numeric key is pressed, the display will show:

		E	n	t	e	r	C	o	d	e				
						*	.	.	.					

when the complete PIN code is keyed in followed by “OK”, within 10 sec., the first two lines of the user menu is shown:

		A	w	a	y	A	r	m						
		H	o	m	e	A	r	m						

A flashing dot will appear next to “Away Arm”, the complete menu list consists of:

		A	w	a	y	A	r	m						
		H	o	m	e	A	r	m						
		B	y	p	a	s	s							
		L	o	g										

These items can be scrolled through by using the “▼”, “▲” keys.

#### <NOTE>

- ☞ If there is any fault event occurred, no matter if the fault condition has been rectified or not, when you enter the PIN Code followed by “OK”, the following screen will be displayed.

		F	a	u	l	t	D	s	p					
		A	w	a	y	A	r	m						
		H	o	m	e	A	r	m						
		B	y	p	a	s	s							
		L	o	g										
		S	M	S										

And the cursor stays at “Fault Dsp” position. To arm the system, please see the section “Forced Arming” below.

- ☞ If there is any SMS message saved, the screen will display SMS for SMS message reading

☞ If you press “ G ” while the “**Alarm off**” is displayed, a “**Enter Code**” prompt screen will be displayed. After you enter your pin Code, the above screen will also be displayed.

☞ After 30 seconds of key-inactivity, the system will automatically exit User Menu and return to “**Alarm off**” mode.

Afterwards only current date & time is displayed on the second line.

☞ The system can also be armed by using the Remote controller (Optional).

## II. Away (Alarm ON) Mode

### 1. Arming the system

If the system is in Disarmed mode (Alarm off), to arm the system.

**Step 1.** Enter your PIN code and press “OK”. The display will show:

	A	w	a	y	A	r	m				
	H	o	m	e	A	r	m				
	B	y	p	a	s	s					
	L	o	g								
	S	M	S	m	e	s	s	a	g	e	

and the cursor stays at “**Away Arm**”

**Step 2.** Press “OK” and the screen will display.

	T	i	m	e	T	o	E	x	i	t	
					3	0	s	e	c		

The defined EXIT Delay is displayed on the second line, and is counting down. During the EXIT Delay period, the exit sound plays, unless it has been chosen to switch off.

**Step 3.** When the Exit Delay time is up, or the “**Entry**” Door Contact (Final Door Set Function programmed to be “On”) is closed, the Control Panel will sound a long beep. The “**Alarm On**” will display on the screen and the system is in Arm mode.

	A	l	a	r	m	O	N				
	0	7	:	2	5	1	6	D	e	c	

#### <NOTE>

☞ When “**Final Door Set Option**” is set to “**Off**”, the Control Panel enters “**Alarm On**” mode only when the Exit Delay time is up.

☞ The Control Panel has “**Screen Save**” function. The “**Alarm on**” message will be displayed for 160 sec. only.

### 2. Stopping the Exit Delay

The Exit Delay can be stopped by disarming the system.

**Step 1.** Press “ G ”

**Step 2.** The screen will ask you to enter the PIN code. In addition, the counting down Exit Delay is displayed on the left side of the 2<sup>nd</sup> line.

**Step 3.** Enter your PIN code and then press “OK”. “**Alarm Off**” will be displayed on the screen and the system returns to Disarmed mode.

#### <NOTE>

☞ The Exit Delay can also be stopped by pressing the “**Disarm**” button on the Remote Controller (Optional).

☞ If the Exit Delay period times out before the code can be entered, the system will be armed.

### 3. Extend the Exit Delay

During the Exit Delay period, the delay time can be extended by pressing the “**ARM**” button on the Remote Controller (Optional). Each time the “**ARM**” button is pressed, the delay time starts counting from the beginning. ( To do this, press and hold th ARM button for 1 second and you will hear a long beep to confirm the extention of Exit time).

#### <NOTE>

☞ While you arm the system, if a Door Contact or PIR sensor has been triggered (eg. Door is open), arming is also prohibited. To arm the system, please see the section “**Forced Arming**” below.

### III. Forced Arming

- While you try to arm the system by entering the PIN Code, if there is any fault situation has occurred before, the display will show.

		F	a	u	l	t		D	s	p				
		A	w	a	y			A	r	m				

- If you move the cursor to “**Away Arm**” position and then press “**OK**”, the Control Panel will sound a ding-done warning sound to indicate arming is prohibited, and the message “**Fault DSP**” is displayed in the middle of the top display row and alternates at 2-second intervals with individual fault events.

#### <NOTE>

- ☞ In the same situation, if you arm the system by pressing the “**Arm**” button on the Remote Controller, the Control Panel will response in the manner as described above and the arming is also prohibited.
- You will need to press “**G**” to return back to Alarm Off Screen.
- At this moment, you can first rectify all of the problems and then clear the “**Fault display**” (Please see section XI “**In a Fault Situation**”), and then afterwards you can arm the system.
- However, if you want to put the system into Arm mode with the fault situation persisting, it is still possible by following the steps below to execute “**Forced Arming**”.

**Step 1.** Enter your PIN Code and press “**OK**”, a prompt message will be displayed.

		F	o	r	c	e		A	r	m				
								(	O	k	?)			

**Step 2.** Press “**OK**” to double confirm.

**Step 3.** The Exit Delay counting down screen is displayed as in above section.

**Step 4.** When the Exit Delay time is up, the Control Panel will sound a long beep. The “**Alarm On**” will display on the screen and the system is in Arm mode.

#### <NOTE>

- ☞ Any time pressing “**G**” followed by “**PIN Code**” and “**OK**”, the screen returns to “**Alarm Off**”
- ☞ The “**Fault DSP**” screen has a time-out for 5 minutes. It will automatically exit and return to “**Alarm Off**” screen after 5 minutes.
- ☞ If a sensor is by-passed (Please see section “**Partial Arm mode**”, the fault condition of that sensor will not be checked.
- ☞ If a sensor tampered or out-of-order occurs, you can temporarily by-pass it or permanently remove it.

### Arming with Door Opened

- While you arm the system, if any door was detected to be open, the Control Panel will also sound a ding-dong warning sound to indicate arming is prohibited. The message “**Fault DSP**” is displayed in the middle of the top display row and alternates at 2-second intervals with the sensor name that is being triggered.
- At this moment, you can close the opened door, after which the fault display will be cleared automatically and the screen returns to “**Alarm off**”. You then can arm the system again.
- However, if you want to put the system into Arm mode with the opened door, it is still possible by following the Steps described above to execute “**Forced Arming**”.

### IV. Disarm (Alarm off) mode

#### Disarming the system

To disarm the system

If the system is in either the Away Arm mode or Home Arm mode (Alarm ON), enter your pin Code and press “**OK**”. If the PIN code is correct, the Control Panel will sound 2 short beeps and return to Disarmed mode. The screen will show.

		A	l	a	r	m		O	f	f				
		0	6	:	4	3		0	1		J	a	n	

<NOTE>

- ☞ When the system is Home Armed, pressing the “**DISARM**” button on the Remote Controller will disarm the system.
- ☞ When the system is Away Armed, pressing the “**DISARM**” button on the Remote Controller can disarm the system when either an “**Entry**” device has been triggered, or when the “**Remote Controller Entry Enable**” has been set to “**ON**”.

## V. Home Arm Mode

The Home mode allows the home to be Armed so that no one can get inside without first Disarming the system, yet the person already inside the house can move freely without self triggering the alarm.

<NOTE>

- ☞ You can enter the HOME mode only when the system is in DISARMED mode.

### 1. Entering Home Mode:

**Step 1.** When the system is in Disarmed mode, key in your Pin Code then press “**OK**”.

**Step 2.** Press “**▼**” to move the cursor down to select “**Home Arm**”.

**Step 3.** Press “**OK**” and the screen will display.

		T	i	m	e	T	o	E	x	i	t		
						3	0	s	e	c			

The defined EXIT Delay is displayed on the second line, and is counting down. During the EXIT Delay period, the exit sound plays, unless it has been chosen to switch off.

**Step 4.** When the Exit Delay time is up, the Control Panel will sound a long beep. The “**Home**” will display on the screen and the system is in Home Arm mode.

<NOTE>

- ☞ The system can also be armed by using the Remote controller (Optional).

**Step 5.** Press “**OK**” and the screen will display.

		H	o	m	e								
		0	8	:	0	0	1	6	D	e	c		

### 2. Stopping the Exit Delay

The Exit Delay can be stopped following the steps described in “**Stopping the Exit Delay**” in section II, “**Away Mode**”

### 3. Extend the Exit Delay

The Exit Delay can be extended following the steps described in “**Extend the Exit Delay**” in section II, “**Away Mode**”

### 4. Forced Arming

- If there is any fault condition has occurred or a door was found opened before or any sensor is triggered, when you press “**OK**” in step 3 above or when you press “**Home**” button on the Remote Controller, the Control Panel will sound a ding-dong warning sound to indicate entering the Home mode is prohibited. You rectify the problem first, then clear the fault display, and then try again. Or you can do forced arming to enter Home mode compulsorily. Please follow the instructions described in “**Forced Arming**” in Section III.

## VI. Partial (By-pass) Arm Mode

The Partial (By-pass) Arm mode allows the user to de-activate (by-pass) any sensors at their discretion. This feature allows your home to be armed; yet the person inside the house can move freely in the area where the sensor is by-passed.

### To put the system into the Partial (By-pass) Arm mode:

**Step 1.** Enter your PIN code and press “**OK**” within 10 seconds. The display will show:

		A	w	a	y	A	r	m					
		H	o	m	e	A	r	m					
		B	y	p	a	s	s						

**Step 2.** Press “**▼**” to move the cursor down to select “**Bypass**”.

**Step 3. Press “OK”**

**Step 4.** All the zones are listed in zone number order.

		DC	B	a	c	k	d	o	o	r		
		I	R	H	a	l	l	w	a	y		
		DC	F	r	o	n	t	d	o	o	r	
		I	R	L	i	v	i	n	g	r	o	o
		RC	M	R	.	S	M	I	T	H		
		S	t	o	p							

**Step 5.** Press “▼”, “▲” keys to select the zone to be by-passed.

		By	-	p	a	s	s	:	(	O	k	?)
DC		B	a	c	k	d	o	o	r			

**Step 6.** Press “OK” to confirm the selection. The selected zone will be marked with a “\*” character in front of it to indicate that device is to be by-passed.

<NOTE>

☞ The zones can be toggled between by-passed and not by-passed by pressing the “OK” key repeatedly followed by the “\*” character appearing for By-pass setting and “\*” character disappearing for By-pass unsetting.

**Step 7.** You can repeat Step 5 ~ Step 6 to continue selecting the device to be by-passed.

**Step 8.** After all the sensors to be by-passed have been selected, press “↶” to return to user menu and the cursor stays at “Arm”.

**Step 9.** Press “OK” to select “Arm” and to arm the system.

<NOTE>

☞ If a sensor is by-passed, then the Control Panel will not respond to its triggering in Arm mode.

☞ The by-pass setting is effective for only one time, once the system is disarmed, the by-pass setting is cleared automatically.

☞ When a sensor is by-passed, the system can be armed directly regardless of its fault situation (if any). However, its fault situation is still being monitored and will be logged and displayed when you access the “Log” submenu.

## VII. Alarm Activation

■ For Alarm Activation by Events and Control Panel Responses, please refer to the following table:

## Control Panel Mode & Response Table

Type of Alarm	Alarm Abbr	Disarmed	Away Arm	Home Arm	Exit	Away Arm Entry	Home Arm Entry
Burglar	“B”	No Response	Instant Burglar Alarm	Instant Burglar Alarm	No Response	No Response	No Response
Home Omit	“O”	No Response	Instant Burglar Alarm	No Response	No Response	No Response	No Response
Home Access	“A”	No Response	Instant Burglar Alarm	Start Entry Timer	No Response	No Response	No Response
* Away Only	“Y”	No Response	Instant Burglar Alarm	No Response	No Response	No Response	No Response
Entry	“E”	No Response	Start Entry Timer	Start Entry Timer	No Response	No Response	No Response
Delay	“D”	No Response	Instant Burglar Alarm	Instant Burglar Alarm	No Response	No Response	No Response
24 HR.	“H”	Burglar Alarm	Burglar Alarm	Burglar Alarm	Burglar Alarm	Burglar Alarm	Burglar Alarm
Medical	“M”	Emergency Alarm	Emergency Alarm	Emergency Alarm	Emergency Alarm	Emergency Alarm	Emergency Alarm
Fire	“F”	Fire Alarm	Fire Alarm	Fire Alarm	Fire Alarm	Fire Alarm	Fire Alarm
Water	“W”	Water Alarm	Water Alarm	Water Alarm	Water Alarm	Water Alarm	Water Alarm

\* This “AWAY ONLY” attribute applies to Norway Specification only.

## VIII. Stop the Alarm and Alarm Display

During any alarm, the Control Panel will sound its siren and report to the Phone number programmed previously. The display will show as below:

A	L	A	R	M	!	A	L	A	R	M	!				
		A	L	A	R	M	!	A	L	A	R	M	!		

### 1. Stopping the Alarm

During an alarm, to stop the siren and clear display:

**Step 1.** Key in your PIN code, followed by "OK".

#### <NOTE>

☞ if you press any key other than the first digit of your PIN code, the screen will prompt you to enter your PIN code.

**Step 2.** If the PIN code is correct, then the alarm sounding will be stopped.

#### If the alarm is stopped before reporting process begins:

**Step 3A.** The screen will show you which device that triggered the alarm with its zone number displayed:

A	l	a	r	m	S	t	a	r	t	e	d	B	y	
0	1	)	.	I	R	H	a	i	l	w	a	y		

**Step 4A.** Press "OK"

**Step 5A.** If there are more than one alarm events have been raised, the Control Panel continues displaying the 2nd alarm event with "02)." Stating at the beginning of the 2nd line.

**Step 6A.** Repeat pressing further keys until all the alarm events are displayed thoroughly then the display will show:

S	y	s	t	e	m	r	e	a	c	h	e	d
N	o	n	e									

**Step 7A.** Press "OK", the display returns to "Alarm off".

#### <NOTE>

☞ Press "G" or no key is pressed within 5 sec. the screen returns to 1<sup>st</sup> device display. You can repeat from the beginning to view the alarm event one more time.

☞ No alarm reporting will be made. However one "OPEN" report by the user will be reported.

#### If the alarm is stopped before reporting is finished:

**Step 3B.** The screen will show you which device triggered the alarm with its zone number displayed:

A	l	a	r	m	S	t	a	r	t	e	d	B	y	
0	1	)	.	I	R	H	a	i	l	w	a	y		

**Step 4B.** Press "OK"

**Step 5B.** If there are more than one alarm events have been raised, the Control Panel continues displaying the 2nd alarm event with "02)." Starting at the beginning of the 2nd line.

**Step 6B.** Repeat pressing further keys until all the alarm events are displayed thoroughly then the display will show:

S	y	s	t	e	m	r	e	a	c	h	e	d
N	o	n	e									

**Step 7B.** Press "OK", the display returns to "Alarm off".

#### If the alarm is stopped after reporting has been finished,

**Step 3C.** The device that triggered the alarm with its zone number is displayed.

A	l	a	r	m	S	t	a	r	t	e	d	b	y	
0	1	)	.	I	R	H	a	i	l	w	a	y		

● Proceed to display the alarms and clear the alarm displays as specified in **Step 4A** ~ **Step 6A** in previous section.

**Step 4C.** After all the alarm events are cleared, then the display will show:

S	y	s	t	e	m	r	e	a	c	h	e	d
2	6	9	4	0	6	6	7					

**Step 5C.** Press “OK”, the display returns to “Alarm off”.

<NOTE>

- ☞ When an alarm (other than Panic Alarm) is raised, press the “Disarm” button on the Remote Controller will also stop the alarm (Optional).
- ☞ Panic Alarm must be silenced at the Control Panel. This is to prevent the Remote Controller from being snatched from the user and silence the alarm using the Disarm button.

## 2. Alarm memory

If an alarm was raised without being silenced during your absence, and the alarm reporting has been carried out; the screen will stay on the “Alarm warning” display.

A	L	A	R	M	!	A	L	A	R	M	!				
		A	L	A	R	M	!	A	L	A	R	M	!		

- When you come back and disarm the system by pressing the **DISARM** button on the Remote controller, the “Alarm warning” display still remains unchanged.
- To clear the display, follow the same steps as “Stopping the Alarm” described above, you can see the source of the alarm.
- If more than one alarm events including “Device Tampered” have occurred, repeated pressing further keys, the alarm events will be displayed one by one sequentially until all events have been displayed, then the screen returns to “Alarm off”.

## IX. Event Log

The alarm log memorises the last 20 system events including

- ✓ All Alarm Events with Device ID
- ✓ All Fault Warning Events
- ✓ All Arming And Disarming Events
- The logged events are displayed in reversed chronological order, (most recent event first).
- The log is marked with a “Start” label before the most recent entry and “End” after the oldest entry.

- To View Log:

**Step 1.** Key in the user code and press “OK” while in Disarm mode to access User’s Menu.

**Step 2.** Press the “▼” key repeatedly to select “Log” and then press “OK” and the start of the log will be displayed.

				S	T	A	R	T						
		0	8	:	0	2		1	6	D	e	c		

**Step 3.** The log can now be scrolled up and down and viewed with the “▲”, “▼” keys; the most recent event will be at the start.

**Step 4.** An example of logged event is given below; where the first line tells the time and date of the event, the second line tells the type of event and the third line either states the User or the device that caused the event. Abbreviation as “DC” stands for Door Contact, “LB” is short for low battery, “Tamp” means Tamper where “Rest” is short for restore.

		0	2	:	3	8		0	1	J	a	n		
		D	i	s	a	r	m							
		U	s	e	r		1							

		0	2	:	4	0		0	2	J	a	n		
		P	a	n	i	c								
		D	A	V	I	D		R	C					

## X. SMS Message Reading

EAS/Z918/GSM is designed with SMS communication facility in addition to the other traditional Digital/Voice alarm reporting styles.

- The SMS messages are displayed in reversed chronological order, (most recent event first)
- The SMS messages are marked with a “Start” label before the most recent entry and “End” after the oldest entry.

### To View SMS Message Log:

**Step 1.** Key in the user code and press “OK” while in Disarm mode to access User’s Menu.

**Step 2.** Press the “▼” key repeatedly to select “**Read SMS**” and then press “**OK**” and the start of the SMS message will be displayed.

				S	T	A	R	T						
							▼							

**Step 3.** The SMS Message can now be scrolled up and down and viewed with the “▲”, “▼” keys; the most recent message will be at the start.

**Step 4.** An example of SMS message is given below; where the first line tells the phone number of the sender and the second line tells the time and date upon receipt of this message.

	8	8	6	9	3	8	0	1	8	1	2	3		
	0	5	/	0	3		1	6	:	4	0			

**Step 5.** Press “**OK**” to see the message  
Content of this SMS.

### To Delete SMS Message:

**Step 1.** Press “G” when the LCD is displaying the SMS message that is to be deleted. The next screen will request for your confirmation:

	8	8	6	9	3	8	0	1	8	1	2	3		
	D	e	l	e	t	e	?	(	+	O	k)			

**Step 2.** Press “**OK**” to confirm.

**EAS/Z918/GSM** will immediately upload the next SMS message in line for reading and display it on the LCD screen.

#### <NOTE>

☞ At Step #2, you may press “G” to simply exit this screen without deleting the SMS message that was read.

## XI. False Alarm Management

EAS/Z918/GSM has a regulatory false alarm management facility built-in:

- ✓ Dual-Ply Entry Warning
- ✓ Sequential Verification Alarm Reporting

### 1. Dual-Ply Entry Warning

- This is to warn the user that an alarm report to the Emergency Phone Numbers is about to be made
- When a zone that is not programmed for delay is violated during the Entry Delay, or the correct PIN code was not entered within the programmed Delay period, a 30-sec internal alarm is given before an alarm report is made.
- If a valid user PIN code is entered within the 30 seconds, the alarm will be aborted and the system returns to normal status.
- If no valid user PIN code is entered, a burglar alarm will be sent.

### 2. Sequential Verification Reporting

- A sequential verification alarm report is generated when a second alarm from a different Burglar Door Contact or Burglar PIR is registered within a 30-min period.
- This Sequential Verification Report will be sent in addition to the alarm report.
- Alarms cannot be verified after the Entry Delay has been initiated.

surface.

## XII. Faulty Situations

- The Control Panel is capable of detecting following fault events:
  - ✓ Control Panel Low Battery
  - ✓ AC Power Fail
  - ✓ Sensor Out-of-order
  - ✓ Sensor Low Battery
  - ✓ Device and Control Panel Tamper
  - ✓ Interference Detection
  - ✓ GSM isn't ready
  - ✓ GSM PUK
  - ✓ GSM PIN Code
- In case any fault condition is detected, the Control Panel will respond with a **"Fault"** display and/or **"Fault"** alarm respectively according to the nature of the faulty event.
- **Device Sabotaged**
  - The Control panel, Door Contact, Remote Keypad & PIR sensors are **"Tamper"** protected.
    - ◆ **Control Panel**

A Tamper switch protects EAS/Z918/GSM from any removal attempts away from its cross mounting bracket

Another Tamper switch protects the Power Supply Lid from being opened or removed.
    - ◆ **PIR Sensor**
      - **For IR-7 & 8**

A Tamper switch protects the enclosure from being opened.
      - **For IR-9**

A Tamper switch protects the enclosure from being opened.

A Back-Tamper protects the unit from being removed from its mounting site
    - ◆ **Door Contact**

A Tamper switch protects the enclosure from either being opened or being removed from the mounting

- **Sensor Low battery**

If the battery voltage of PIR sensor, Door Contact, Remote Keypad, Water Sensor, Remote Controller or Smoke Sensor is low, a "Sensor Low Battery" message will be detected.

- **Sensor out-of-order**

After installation of the PIR sensor, Door Contact, Water Sensor or Smoke Sensor, a periodic supervision signal will be transmitted at intervals between 30 min. to 50 min.

If the Control Panel did not receive the signals transmitted from any individual sensor for a period of 2.5 Hours, a **"sensor out-of-order"** fault event will be detected and displayed.

- **Interference**

EAS/Z918/GSM can detect interference on both 433 Mhz and 868 Mhz frequency band.

After a continuous interference signal is present for more than 30 seconds, an interference event can be logged, reported and displayed on the LCD (if Fault Display submenu is chosen).

- **GSM isn't ready**

If the SIM card is found missing, a warning message will be generated.

### 1. Fault Message Display

- When any fault situation persists, the Control Panel will respond as below when it is in Disarmed mode:
  - The Yellow LED will light to indicated the fault condition
  - The LCD will display the type of fault and the source of the fault in the **"Fault Display"** section of the User Menu.
  - A warning beep will sound at every 30 seconds.
  - If a fault condition is detected while the system is in full arm mode, the fault event display will not be generated until the system is disarmed.

## 2. Clearing Fault Message Display

- The Yellow LED will turn off automatically once all of faulty conditions are restored, or any faulty devices are removed. It cannot be cleared manually.
- On the contrary, the fault message display retains even if the faulty conditions have been restored.
- The fault message can only be cleared manually after the fault condition has been rectified.

## 3. Viewing/Clearing the Fault Message

To check what the fault condition is,

**Step 1.** When the system is in Disarmed mode. Enter your PIN Code followed by “OK”.

**Step 2.** The screen will display

		F	a	u	l	t		D	s	p				
		A	r	m										

and the cursor stays at “**Fault Dsp**”

**Step 3.** Press “OK” to select “**Fault Dsp**”

**Step 4.** All the fault events are listed. Use “▲”, “▼” key to move the cursor downwards or upwards. The screen is also scrolled down or up respectively.

**Step 5.** After viewing all the fault events, press “G” key, a prompt message is displayed.

		C	l	e	a	r		F	a	u	l	t		
				D	s	p	:	(	O	K	?)			

**Step 6.** After the fault condition has been rectified, press “OK” and the fault event will be cleared and the screen returns to “**Alarm off**”.

### <NOTE>

- ☞ In **Step 6**, if “G” key is pressed, the screen returns to “**Alarm off**”, and the Yellow LED stays on, the Control Panel keeps sounding a short beep every 30 seconds, and the fault event display retains.



- ☞ If the fault condition has not been rectified, the fault event display will not be cleared. It will come on again while you try to arm the system and the faulty condition inhibits the system from being armed, the fault message will be displayed again. The fault event display can be cleared only after the fault condition has been rectified.



Even when the fault message is cleared, the fault event will still retained in the “**Log**”.

## 4. Fault Event Response

- When a fault condition is detected, in addition to the fault display, the Control Panel will also respond separately according to the nature of the fault event.

### ■ AC Power Fail

- ◆ Only the yellow LED will light and the fault message will be displayed, no further action will be taken.

### ■ Control Panel Low Battery

- ◆ Any time the Panel battery Low is detected, yellow LED will light while this fault message can be viewed on LCD under “**Fault Display**”.

### ■ Panel Sabotaged

- ◆ If the Tamper switch on the Control Panel is triggered while the system is in Armed and/or Home mode, the Control Panel will sound an audible alarm and report “**Burglary**” alarm.
- ◆ While if the system is in Disarm mode, no alarm will be generated.

### ■ Sensor Low Battery

- ◆ If the low battery is detected on any sensor, yellow LED will light up at any time while its fault message can be viewed on LCD under “**Fault Display**”.

### ◆ Sensor Sabotaged

- ◆ If the Tamper switch on the PIR Sensor or Door Contact is triggered while the system is in Arm & Home

mode, the Control Panel will sound an audible alarm and report **“Burglary”** alarm .

- ◆ While if the system is in Disarm mode, no alarm will be generated.

#### ■ Sensor out-of-order

- ◆ When the system is in Arm mode and the Control Panel cannot receive the supervisory signal from each individual PIR sensor, Door Contact or Smoke Sensor for a period of 2.4 Hours, the Control Panel will sound an audible alarm and yellow LED will light while this fault message can be viewed on LCD under **“Fault Display”**.

- ◆ While the system is in Disarmed mode, no alarm event will be generated.

#### ■ Interference

- ◆ When the system is programmed with Interference Detection On, and when there is an interference detected for 30 seconds, the yellow LED will light up and the fault message can be viewed under the **“Fault Display”**..

## 5. Fault Message Nomenclature

- The fault event message is displayed in short form as below:

<b>Fault Condition</b>	<b>–</b>	<b>Message displayed</b>
Interference	–	<b>“Interference”</b>
AC Power Fail	–	<b>“AC failure”</b>
Control Panel low battery	–	<b>“Panel L.B.”</b>
Control Panel sabotaged	–	<b>“Panel Tamper”</b>
Sensor Low Battery	–	(Sensor w/ Zone Name) + <b>“L.B.”</b>
Sensor Sabotaged	–	(Sensor w/ Zone Name) + <b>“Tamper”</b>
Sensor out-of-order	–	(Sensor w/ Zone Name) + <b>“out”</b>
GSM out of Signal	–	<b>“GSM Signal”</b>

GSM module missing	–	<b>“GSM Missed”</b>
GSM Pin Code, Incorrect/missing	–	<b>“GSM Pin Code”</b>
GSM locked by PUK	–	<b>“GSM PUK”</b>
SIM Card missing	–	<b>“GSM isn’t Ready”</b>

#### <EXAMPLE>

If **“DC Z 01 L.B.”** is displayed, it means Zone 1 Door Contact is low battery.

#### <NOTE>

- ☞ While you arm the system, if any of Door Contact or PIR is triggered,, arming is also prohibited and the sensor triggered will be displayed as fault message.

Sensor triggered	Message displayed
Door Contact triggered	(DC w/ Zone Name) + <b>“open”</b>
PIR triggered	(IR w/ Zone Name) + <b>“Active”</b>

## XIII. Dialing & Call

### Acknowledgment

#### 1. Auto Dialing

- If the system is in Arm mode, when an alarm occurs, the Control Panel will immediately dial the phone numbers you preset and play the recorded messages.
- If the system is in Home mode or Disarmed mode, when an audible alarm is initiated, the Control Panel will wait 15 seconds and then dial the phone numbers.
- After dialing, the Control Panel will delay 5 seconds then starts to play the message. It firstly played the general part of the recorded message (address) then plays the specific alarm message (Burglar, Fire, Medical or Panic) depending on the nature of the alarm.
- To ensure the call is successfully received by the recipient, the recipient should acknowledge the message by pressing the appropriate button on his telephone set.

- The Control Panel, while playing the message, will check if there is any acknowledgement signal being received. If the recipient does not acknowledge the call, the message will be repeated for a period of 80 seconds; the Control Panel will then consider the call as unsuccessful and will try to dial the next phone number in priority.
- If more than one number is programmed the Control Panel will continue to dial the number(s) until two emergency calls are successfully answered with either keys "1" or "0", or closed down with a key "9" acknowledgement.

<NOTE>

- ☞ EAS/Z918/GSM Auto-Dialling features only operate under Tone-Dialling method.

## 2. Call Acknowledgment

- If the recipient successfully receives the call, he should acknowledge it by pressing the "0", "9" or "1" button on his telephone set..

### Acknowledging with signal 0

If the recipient presses "0" on his phone set as the acknowledging signal. The Control Panel will then take the following actions.

- ✓ The Control Panel will go back on-hook.
- ✓ The Control Panel will continue Alarming.
- ✓ The Control Panel will try to dial the phone numbers of the next priorities until two recipients have acknowledged the call.

### Acknowledging with signal 9

If the recipient presses "9" on his phone set as the acknowledging signal, the following will happen:

- ✓ The Control Panel will go back on-hook.
- ✓ The Control Panel will stop alarming and stop dialing.

### Acknowledging with signal "1"

The recipient can press "1" to acknowledge the call and also initiate a One-Way Listen-In Channel. This channel allows the recipient to listen in to what is happening to the other side of the line.

## 3.Auto Redial

- When only one Emergency phone number is stored and that number is engaged, the Control Panel will automatically redial that number up to maximum of 5 times with an interval of 62 sec. between dialing attempts.
- When more than one telephone numbers are stored, the Control Panel will dial in accordance to the set priority order. If the number being dialed is engaged, it will try the next number. Each number will be tried a maximum of 5 times and the redial interval between each number is 5 sec.
- The maximum number of times the Control Panel will retry is 15 times.

<NOTE>

- ☞ If no phone Number is programmed, the Control Panel will not dial.
- ☞ When dialing a pager number, the Control Panel will only send the identity code, it will not play the message and the call is not considered to be successful.

☞ The same pager number will be dialed only once.

accepted, one long beep will be heard and the EAS/Z918/GSM will hang up.

## XIV. Remote Commanding

When T1 and T2 is factory set to be both **OUTPUTS**, or if to be **INPUT&OUTPUT** combination, the devices connected to **OUTPUT** terminal(s) as well as the 2 Universal Receivers added (if any) can then be controlled by Remote Commands sent from any regular phone lines or via SMS messages.

### 1. From Regular Phone Lines

- Step 1.** Dial the GSM phone number of your EAS/Z918/GSM and hang up on the first ring.
- Step 2.** Dial EAS/Z918/GSM again after 15 seconds.
- Step 3.** EAS/Z918/GSM will answer on the first ring and sound 2 beeps.
- Step 4.** Enter the user pin code (user 1 ~ user 4).
- Step 5.** EAS/Z918/GSM will sound two beeps if the pin code is correct.
- Step 6.** Enter the Control Command
  - 20 – UR#1 deactivate**
  - 21 – UR#1 activate**
  - 30 – UR#2 deactivate**
  - 31 – UR#2 activate**
  - 80 – O/P #1 deactivate**
  - 81 – O/P #1 activate**
  - 90 – O/P #2 deactivate**
  - 91 – O/P #2 activate**
  - 00 – Hang up with Confirmation**
  - 10 – Disarm**
  - 11 – Arm**

If the Control Command is accepted two beeps will be heard.

#### <NOTE>

- ☞ In **Step 4**, the first digit of pin code should be entered within 3 sec.
- ☞ In **Step 4**, a valid pin code should be entered with 20 sec. otherwise EAS/Z918/GSM will hang up automatically.
- ☞ If the Control Command is not

### 2. Via SMS message

#### <NOTE>

- ☞ Remember to change the Language setting of your mobile phone to English before proceeding.
- ☞ Remember to have a SMS Keyword from 1 to 10 characters already programmed in the “Programming Mode” before proceeding

- Step 1.** From the mobile phone, enter your command via SMS message as shown below:

M	I	C	H	A	E	L	*	1	2	3	4	2	1	0	0
Your 8-digit SMS keyword programmed under Programming Menu								User PIN							

↓  
Space

Commands indicate for EAS/Z918/GSM to activate Universal Receiver # 1 and send a confirmation SMS back to your mobile phone

- Step 2.** A confirmation SMS message will be read on your mobile phone as:

**“Confirmation, MICHAEL\* 1234 21 00”**

- Step 3.** Or if the following SMS message is sent to EAS/Z918/GSM,

M	I	C	H	A	E	L	*	1	2	3	4	2	1		
Your 8-digit SMS keyword programmed under Programming Menu								User PIN							

Commands indicate for EAS/Z918/GSM to activate Universal Receiver # 1 without

sending a confirmation SMS back  
to your mobile phone

## Appendix

### I. Reset Procedure

#### ◆ Reset to Factory Default Setting

The Control Panel can clear all programmed parameters by the following sequence:

1. Power down Control Panel and remove the battery
2. Apply power while holding down the “▲” key.
3. Release the “▲” key when a tone is heard, “**Enter Code**” will be displayed.
4. Enter the following keys sequence: “▲▼▲▼▲▼▲▼”, “OK”
5. Press the “ G ” key
6. All programmed parameters are reset to factory default setting.
7. If more than 17 incorrect keys entered, then the unit will revert to normal “**Alarm On**” mode.

#### <NOTE>

- ☞ Once the “**System Reset**” is executed, all the programmed data are returned to its default value and all the devices having been learnt-in are removed. You have to do the programming and learn in the device one by one again.

### II. Guarantee

Elbro units are subject to strict quality controls. Nevertheless, we guarantee the unit against functional faults for a period of 12 months (valid with receipt only).

- Manufacturing and material faults will be corrected free of charge as long as the unit has not been opened and has been returned to us.
- Damage caused by mechanical influences or improper operation are excluded from guarantee claims.

This equipment complies with the European R&TTE directive. The declaration of conformity may be requested at the following address:

ELBRO AG • Gewerbestrasse 4 • CH-8162 Steinmaur

Telefon +41 (0)44 854 73 00

Telefax +41 (0)44 854 73 01 • e-mail: [info@elbro.com](mailto:info@elbro.com)

[www.elbro.com](http://www.elbro.com)